

Latitude 5591

Setup and specifications guide



Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.


© 2018 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

1 Set up your computer.....	5
2 Chassis view.....	7
Front open view.....	7
Back view.....	8
Left view.....	8
Right view.....	9
Palmrest view.....	10
3 System specifications.....	11
Dimensions and weight.....	11
Processor.....	12
System information.....	12
Operating system.....	12
Memory.....	13
Ports and connectors.....	13
Communications.....	14
Audio.....	14
Video.....	14
Storage.....	15
Media card-reader.....	15
Display.....	16
Keyboard.....	16
Camera.....	17
Touchpad.....	17
Battery.....	17
Input device	18
Environmental.....	18
Power adapter.....	19
4 System setup options.....	20
Boot Sequence.....	20
Navigation keys.....	21
System Setup overview.....	21
Accessing System Setup.....	21
General screen options.....	21
System Configuration screen options.....	22
Video screen options.....	25
Security screen options.....	25
Secure Boot screen options.....	27
Intel Software Guard Extensions.....	27
Performance screen options.....	28
Power Management screen options.....	28


POST Behavior screen options.....	30
Virtualization support screen options.....	31
Wireless screen options.....	31
Maintenance screen options.....	32
System Log screen options.....	32
Updating the BIOS in Windows	32
System and setup password.....	33
Assigning a system password and setup password.....	33
Deleting or changing an existing system setup password.....	34
5 Software.....	35
Supported operating systems.....	35
Downloading drivers.....	35
Downloading the chipset driver.....	35
Intel chipset drivers.....	36
Intel HD Graphics drivers.....	36
6 Getting help.....	37
Contacting Dell.....	37

Set up your computer


- 1 Connect the power adapter.

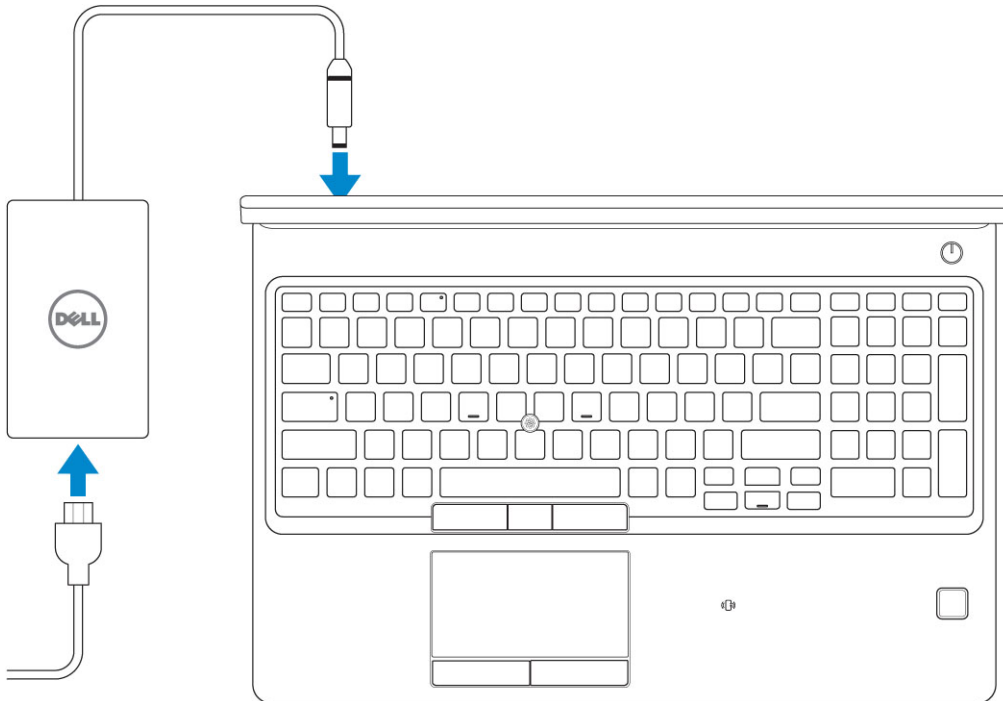


- 2 Press the power button.

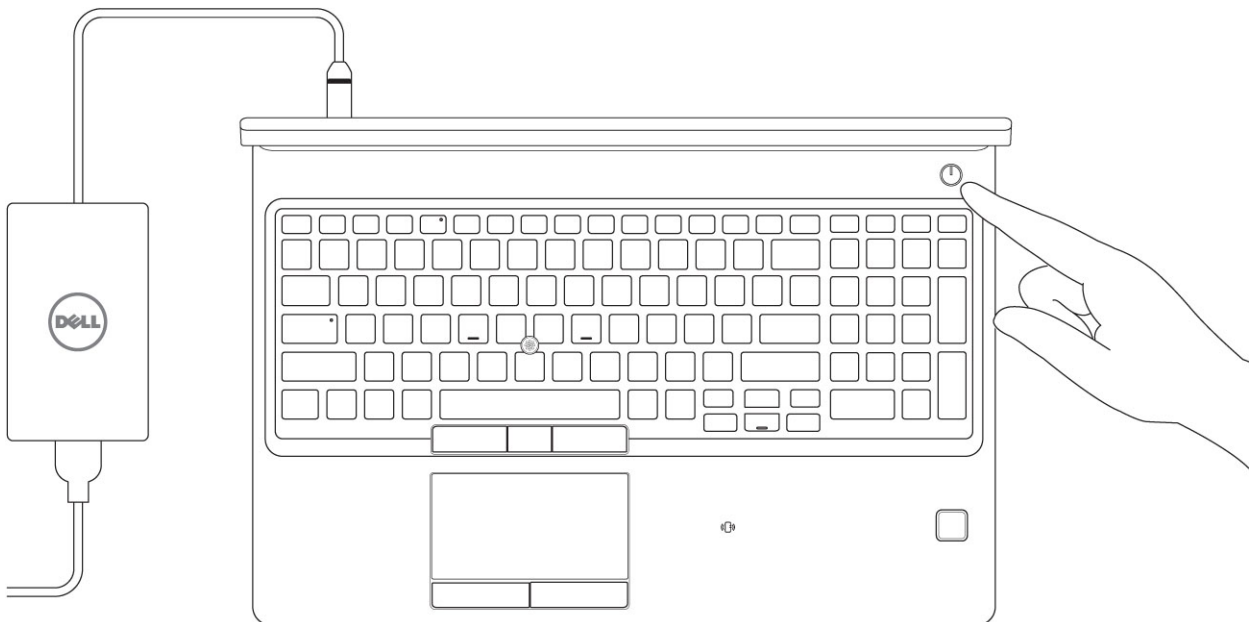

- 3 Follow the instructions on the screen to finish Windows setup:
 - a Connect to a network.

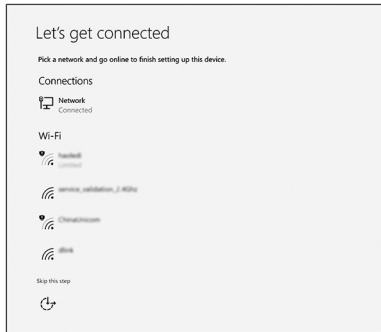

- b Sign-in to your Microsoft account or create a new account.

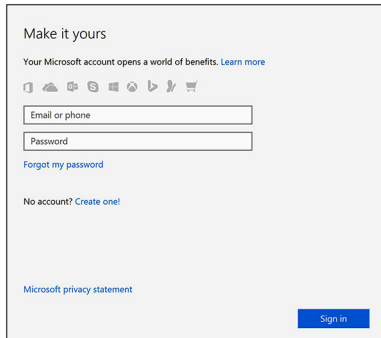


- 4 Locate Dell apps.

Table 1. Locate Dell apps



Register your computer


Dell Help & Support

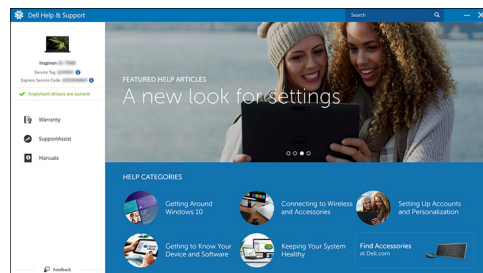

SupportAssist — Check and update your computer

Chassis view

Front open view

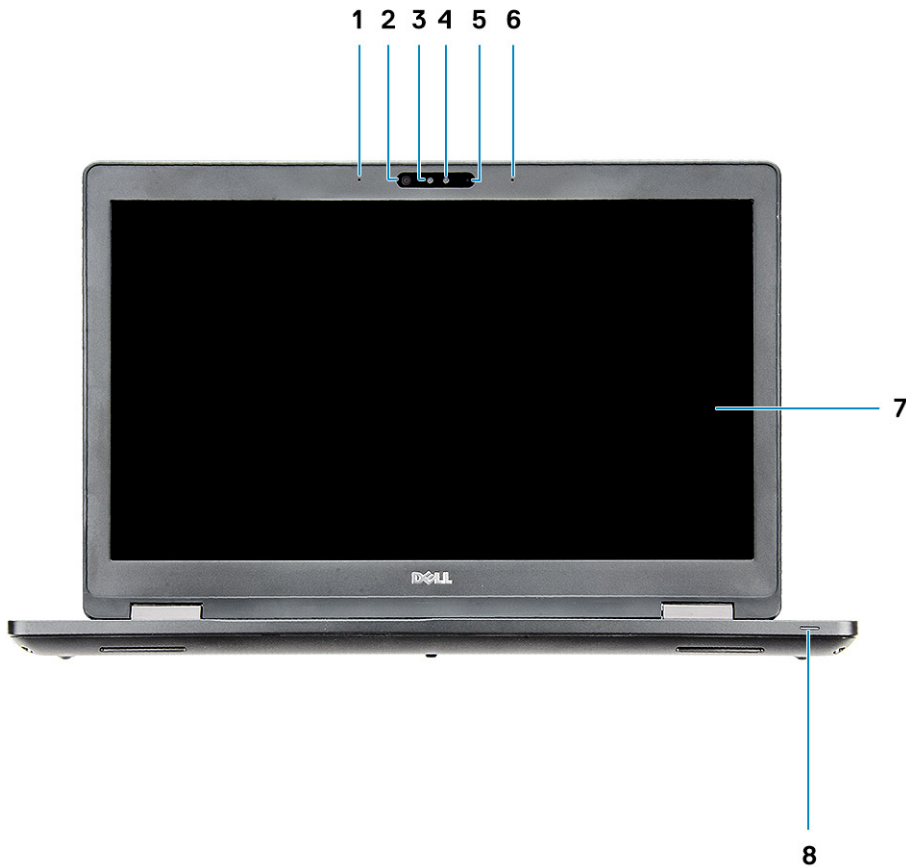

- | | | | |
|---|----------------------------------|---|---------------------------------|
| 1 | Array microphone | 2 | Infrared (IR) camera (optional) |
| 3 | Infrared (IR) emitter (optional) | 4 | Camera status light (optional) |
| 5 | Camera (optional) | 6 | Array microphone |
| 7 | LCD panel | 8 | Battery charge status light |

NOTE: Computer shipped with HD camera module is standard , IR camera is optional.

Back view



- 1

Network port
- 2

HDMI port
- 3

USB 3.1 Gen 1 port
- 4

Power connector port

Left view



- 1


Display Port over USB Type-C connector (optional Thunderbolt™ 3)
- 2

USB 3.1 Gen 1 port
- 3

SD Card reader
- 4


Smart Card reader (optional)

Right view

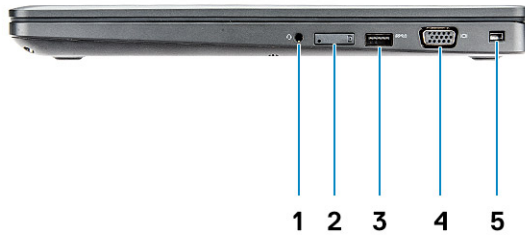

- | | | | |
|---|--------------------|---|--------------------------|
| 1 | Headset port | 2 | SIM-card slot (optional) |
| 3 | USB 3.1 Gen 1 port | 4 | VGA port |
| 5 | Wedge lock slot | | |

Palmrest view

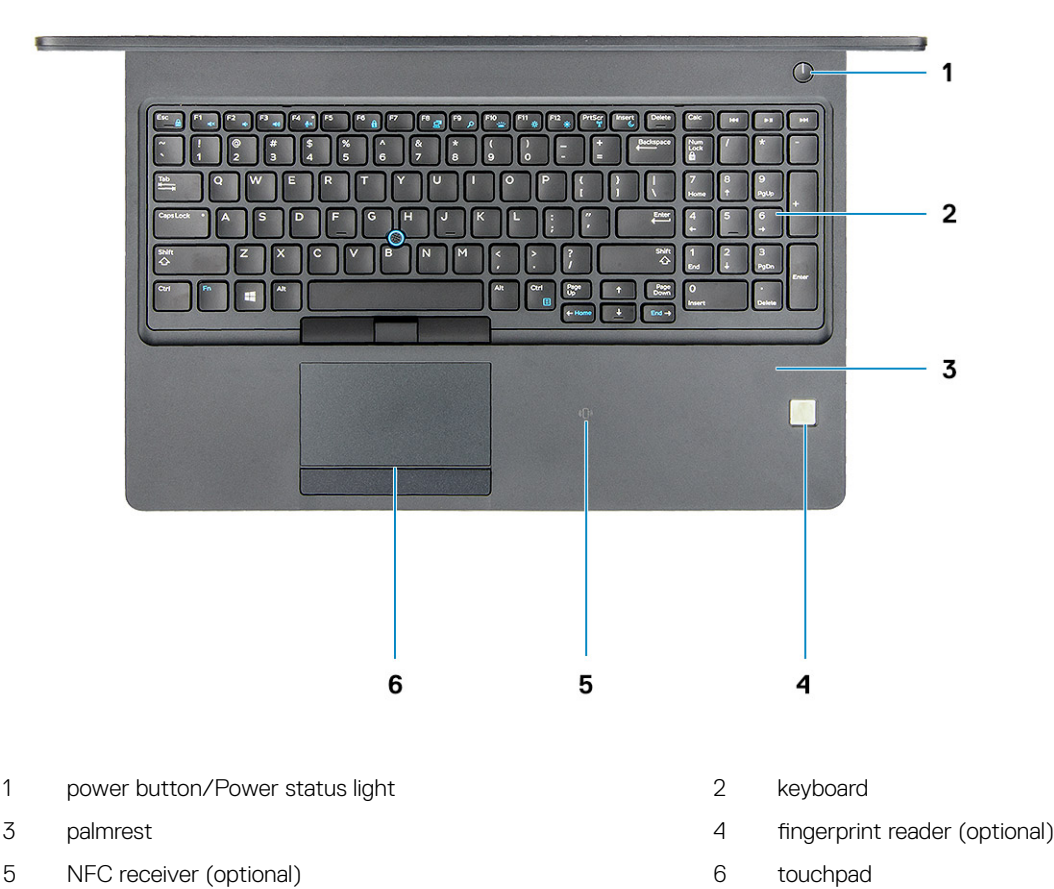

System specifications

NOTE: Offerings may vary by region. The following specifications are only those required by law to ship with your computer. For more information about the configuration of your computer, go to Help and Support in your Windows operating system and select the option to view information about your computer.

Topics:

- [Dimensions and weight](#)
- [Processor](#)
- [System information](#)
- [Operating system](#)
- [Memory](#)
- [Ports and connectors](#)
- [Communications](#)
- [Audio](#)
- [Video](#)
- [Storage](#)
- [Media card-reader](#)
- [Display](#)
- [Keyboard](#)
- [Camera](#)
- [Touchpad](#)
- [Battery](#)
- [Input device](#)
- [Environmental](#)
- [Power adapter](#)

Dimensions and weight

Table 2. Dimensions and weight

Height	Touch System • Front height - 0.8 inch (21.65 mm) • Back height - 0.9 inch (24.3 mm) Non-Touch System • Front height - 0.8 inch (20.6 mm) • Back height - 0.9 inch (24.3 mm)
Width	14.8 inch (376 mm)
Depth	9.9 inch (250.7 mm)

Processor

Global Standard Products (GSP) are a subset of Dell's relationship products that are managed for availability and synchronized transitions on a worldwide basis. They ensure the same platform is available for purchase globally. This allows customers to reduce the number of configurations managed on a worldwide basis, thereby reducing their costs. They also enable companies to implement global IT standards by locking in specific product configurations worldwide. The following GSP processors identified below will be made available to Dell customers.

NOTE: Processor numbers are not a measure of performance. Processor availability is subject to change and may vary by region/country.

Table 3. Processor specifications

Type	UMA Graphics
Intel Core i5-8300H Processor (4 Core, 8M Cache, 2.3GHz, 35W cTDP)	Intel UHD Graphics 630
Intel Core i5-8400H Processor (4 Core, 8M Cache, 2.5GHz, 35W cTDP, vPro)	Intel UHD Graphics 630
Intel Core i7-8850H Processor (6 Core, 9M Cache, 2.6GHz, 35W cTDP, vPro)	Intel UHD Graphics 630

System information

Table 4. System information

Chipset	Intel CM246 chipset
DRAM bus width	64-bit
FLASH EPROM	{SP1 256 Mbits}
PCIe bus	100 Mhz
External bus frequency	{DMI 3.0-8GT/s}

Operating system

Table 5. Operating system

Operating systems supported	- Windows 10 Home (64 bit) - Windows 10 Professional (64 bit) - Ubuntu 16.04 LTS (64bit)
-----------------------------	--

Memory

Table 6. Memory specifications

Minimum memory configuration	4 GB
Maximum memory configuration	32 GB
Number of slots	2 SODIMM
Maximum memory supported per slot	16 GB
Memory options	• 4 GB - 1 x 4 GB • 8 GB - 1 x 8 GB • 8 GB - 2 x 4 GB • 16 GB - 2 x 8 GB • 16 GB - 1 x 16 GB • 32 GB - 2 x 16 GB
Type	DDR4 SDRAM Non-ECC memory
Speed	2666 MHz

Ports and connectors

Table 7. Ports and connectors

Memory card reader	microSD 4.0 memory card reader
Smart card reader	Yes (Optional)
USB	Three USB 3.1 Gen 1 (one with PowerShare)
Security	Noble wedge lock slot
Docking port	DisplayPort over USB Type C (optional Thunderbolt 3)
Audio	• Universal audio jack • Noise reduction array microphones
Video	• HDMI 1.4 (UMA) • One VGA • HDMI 2.0 (Discrete)
Network adapter	One RJ-45 connector
Serial port	NA
Parallel port	NA
SIM card reader	One uSIM card slot (optional)

Communications

Table 8. Communications

Network adapter	Intel i219LM Gigabit (10/100/1000 Mbps) Ethernet Controller (RJ-45) with Intel Remote Wake UP, PXE and Manageability capabilities alerting (AMT 11 / DASH 1.1)
Wireless	• Wi-Fi 802.11 a,b,g,n/ac via M.2 • MU-MIMO RX • Bluetooth via WLAN • Mobile Broadband LTE

Audio

Table 9. Audio specifications

Controller	Realtek ALC3246-CG Controller with Waves MaxxAudio Pro
Type	Multi-channel high-definition audio
Stereo conversion	Digital audio-out through HDMI — up to 7.1 compressed and uncompressed audio
Speakers	Two (Bi-Directional speakers)
Internal interface	High-definition audio codec
Interface	• Universal audio jack • High quality speakers • Noise reducing array microphones • Stereo headset/mic combo
Internal speaker amplifier	2 W(RMS) per channel
Volume controls	Hot keys

Video

Table 10. Video

Controller	Type	CPU Dependency	Graphics memory type	Capacity	External display support	Maximum resolution
Intel UHD Graphics 630	UMA	• Intel® Core i5-8300H • Intel® Core i5-8400H • Intel® Core i7-8850H	Integrated	Shared system memory(Upto 32 GB)	VGA HDMI 1.4(UMA) HDMI 2.0(DSC) eDP(Internal)	HDMI 1.4 (UMA): 4096x2160 @ 30 Hz HDMI 2.0 (DSC): 4096x2160 @ 60 Hz Analog: (VGA) system 1920x1200 @ 60Hz

Controller	Type	CPU Dependency	Graphics memory type	Capacity	External display support	Maximum resolution
					Via Optional Type-C Port: DisplayPort	Max Digital: (DP 1.2 over Type-C Port) 4096x2304 @ 60Hz
NVIDIA GeForce® MX130	Discrete	NA	GDDR5	2 GB	DisplayPort HDMI 2.0	HDMI 1.4 (UMA): 4096x2160 @ 30 Hz HDMI 2.0 (DSC): 4096x2160 @ 60 Hz Analog: (VGA) system 1920x1200 @ 60Hz Max Digital: (DP 1.2 over Type-C Port) 4096x2304 @ 60Hz

Storage

Table 11. Storage specifications

Primary/Boot drive	Primary interface	Secondary drive	Secondary interface	Security option
SSD M.2 2280 SATA: up to 512GB, OPAL SED options	SATA AHCI, Up to 6 Gbps	M.2 2230 (WWAN slot)	PCIe 3 x2 NVME, Up to 16 Gbps	YES
SSD M.2 2280 PCIe/NVMe: up to 1TB, OPAL SED options	PCIe 3 x4 NVME, Up to 32 Gbps	M.2 2230 (WWAN slot)	PCIe 3 x2 NVME, Up to 16 Gbps	YES
One 2.5 " HDD: up to 1TB, Hybrid OPAL SED options	SATA AHCI, Up to 6 Gbps	M.2 2230 (WWAN slot)	PCIe 3 x2 NVME, Up to 16 Gbps	YES
SSD M.2 2230 PCIe/NVMe : up to 256GB (in WWAN slot only)	PCIe 3 x2 NVME, Up to 16 Gbps	M.2 2280 SATA	SATA AHCI, Up to 6 Gbps	NO
SSD M.2 2230 PCIe/NVMe : up to 256GB (in WWAN slot only)	PCIe 3 x2 NVME, Up to 16 Gbps	2.5" HDD	SATA AHCI, Up to 6 Gbps	NO

Media card-reader

Table 12. Media-card reader specifications

Type	One SD 4.0 card slot
Supported cards	- SD 4.0 - Memory Stick, Pro, HG, Duo and XC - SDHC - Secure Digitale Xtended Capacity(SDXC) and Multi-Media Card - SD UHS-I (Ultra High Speed-I) and SD UHS-II (Ultra High Speed-II) FD/HD mode

Display

Table 13. Display specifications

Type	• 15.6-inch FHD WVA (1920 x 1080) Anti-glare (16:9) WLEDWLED non-touchscreen • 15.6" HD (1366 x 768) Anti-glare (16:9) WLED, non-touchscreen • 15.6" FHD WVA (1920 x 1080) (16:9) Embedded Touch Display with Truelife
Height (Active area)	7.62 inch (193.5 mm)
Width (Active area)	13.55 inch (344.2 mm)
Diagonal	15.6 inch(396.25 mm)
Touch panel specification	10 finger touch support is supported on the embedded 15.6" touch panel.
Luminance/Brightness (typical)	220/300 nits
Refresh rate	60 Hz
Horizontal viewing angle (min)	+/- 40 degrees(HD) +85/-85 degrees(FHD)
Vertical viewing angle (min)	+10/- 30 degrees(HD) +85/-85 degrees(FHD)

Keyboard

Table 14. Keyboard specifications

Number of keys	• 82 (U.S. and Canada) • 83 (Europe) • 84(Brazil) • 86 (Japan)
Size	Full sized • X= 19.05 mm key pitch • Y= 19.05 mm key pitch
Backlit keyboard	Yes(Optional)
Layout	QWERTY/AZERTY/Kanji

Camera

Table 15. Camera specifications

Resolution	Camera: - Still image: 0.92 megapixels - Video: 1280x720 at 30 fps Infrared camera (optional): - Still image: 0.92 megapixels - Video: 1280x720 at 30 fps
Diagonal viewing angle	- Camera : 74 degrees - Infrared camera : 74 degrees

Touchpad

Table 16. Touchpad specifications

Resolution	- Horizontal: 1221 - Vertical: 661
Dimensions	- Width: 4.0 inch (101.7 mm) - Height: 2.17 inch (55.2mm)
Multi-touch	Supports up to 5 fingers. Gesture support is dependent on operating system.

Battery

Table 17. Battery Specifications

Type	51 WHr,3 Cell, Li-ion/Polymer, ExpressCharge Capable Battery 68 WHr,4 Cell, Li-ion/Polymer, ExpressCharge Capable Battery 68 WHr,4 Cell, Li-polymer, Long Cycle Life Battery 92 WHr,6 Cell, Li-polymer, ExpressCharge Capable,Battery
Dimension	1 51 WHr,3 Cell,Li-ion/Polymer Battery - Length: 181mm (7.126 inch) - Width: 95.9mm (3.78 inch) - Height: 7.05mm (0.28 inch) - Weight: 250.00 g 2 68 WHr,4 Cell,Li-ion/Polymer - Length: 233mm (9.17 inch) - Width: 95.9mm (3.78 inch)

	- Height: 7.05mm (0.28 inch) - Weight: 340.00 g 3 68 WHr,4 cell, Li-polymer Battery - Length: 233mm (9.17 inch) - Width: 95.9mm (3.78 inch) - Height: 7.05mm (0.28 inch) - Weight: 340.00 g 4 92 WHr,6 cell,Li-polymer - Length: 332mm (13.07 inch) - Width: 96mm (3.78 inch) - Height: 7.7mm (0.303 inch) - Weight: 450.00 g
Weight (maximum)	0.045 kg (0.99 lb)
Voltage	51 WHr - 11.4 VDC 68 WHr - 7.6 VDC 68 WHr - 7.6 VDC 92 WHr - 11.4 VDC
Life span	300 discharge/recharge cycles(Standard) and 1000discharge/recharge cycles(Long cycle)
Charging time when the computer is off (approximate)	2-4 hours
Operating time	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions
Temperature range: Operating	- Charge: 0 °C to 50 °C (32 °F to 122 °F) - Discharge: 0 °C to 70 °C (32 °F to 158 °F)
Temperature range: Storage	-20 °C to 65 °C (-4 °F to 149 °F)
Coin-cell battery	ML1220

Input device

- Single Point non-backlit Keyboard
- Dual Pointing backlit Keyboard
- Microsoft Precision Touchpad

Environmental

NOTE: For more details on Dell environmental features, please go to the environmental attributes section. See your specific region for availability.

Table 18. Environmental

Energy efficient power supply	Internal
80 plus bronze certification	155W EPA bronze

80 plus platinum certification	240W EPA platinum
Customer replaceable unit	No
Recyclable packaging	Optional, US only
MultiPack packaging	No

Power adapter

Table 19. Power adapter specifications

Type	90 W adapter 130 W adapter
Input Voltage	100 to 240 VAC
Input current (maximum)	90 W - 1.6 A 130 W - 1.8 A
Adapter size	7.4 mm Barrel Type
Input frequency	50 Hz to 60 Hz
Output current	90 W - 4.62 A (continuous) 130 W - 6.7 A (continuous)
Rated output voltage	19.5 VDC
Temperature range (Operating)	-40° to 70° C (-40° to 158° F)
Temperature range (Non-Operating)	-40° to 70° C (-40° to 158° F)

System setup options

NOTE: Depending on the computer and its installed devices, the items listed in this section may or may not appear.

Topics:

- [Boot Sequence](#)
- [Navigation keys](#)
- [System Setup overview](#)
- [Accessing System Setup](#)
- [General screen options](#)
- [System Configuration screen options](#)
- [Video screen options](#)
- [Security screen options](#)
- [Secure Boot screen options](#)
- [Intel Software Guard Extensions](#)
- [Performance screen options](#)
- [Power Management screen options](#)
- [POST Behavior screen options](#)
- [Virtualization support screen options](#)
- [Wireless screen options](#)
- [Maintenance screen options](#)
- [System Log screen options](#)
- [Updating the BIOS in Windows](#)
- [System and setup password](#)

Boot Sequence

Boot Sequence allows you to bypass the System Setup–defined boot device order and boot directly to a specific device (for example: optical drive or hard drive). During the Power-on Self Test (POST), when the Dell logo appears, you can:

- Access System Setup by pressing F2 key
- Bring up the one-time boot menu by pressing F12 key

The one-time boot menu displays the devices that you can boot from including the diagnostic option. The boot menu options are:

- Removable Drive (if available)
- STXXXX Drive

NOTE: XXX denotes the SATA drive number.

- Optical Drive (if available)
- SATA Hard Drive (if available)
- Diagnostics

NOTE: Choosing Diagnostics, will display the ePSA diagnostics screen.

The boot sequence screen also displays the option to access the System Setup screen.

Navigation keys

NOTE: For most of the System Setup options, changes that you make are recorded but do not take effect until you restart the system.

Keys	Navigation
Up arrow	Moves to the previous field.
Down arrow	Moves to the next field.
Enter	Selects a value in the selected field (if applicable) or follow the link in the field.
Spacebar	Expands or collapses a drop-down list, if applicable.
Tab	Moves to the next focus area.

NOTE: For the standard graphics browser only.

Esc Moves to the previous page until you view the main screen. Pressing Esc in the main screen displays a message that prompts you to save any unsaved changes and restarts the system.

System Setup overview

System Setup allows you to:

- Change the system configuration information after you add, change, or remove any hardware in your computer.
- Set or change a user-selectable option such as the user password.
- Read the current amount of memory or set the type of hard drive installed.

Before you use System Setup, it is recommended that you write down the System Setup screen information for future reference.

CAUTION: Unless you are an expert computer user, do not change the settings for this program. Certain changes can cause your computer to work incorrectly.

Accessing System Setup

- 1 Turn on (or restart) your computer.
- 2 After the white Dell logo appears, press F2 immediately.
The System Setup page is displayed.

NOTE: If you wait too long and the operating system logo appears, wait until you see the desktop. Then, shut down or restart your computer and try again.

NOTE: After the Dell logo appears, you can also press F12 and then select BIOS setup.

General screen options

This section lists the primary hardware features of your computer.

Option	Description
System Information	This section lists the primary hardware features of your computer.

- **System Information:** Displays BIOS Version, Service Tag, Asset Tag, Ownership Tag, Ownership Date, Manufacture Date, and the Express Service Code.

Option	Description
	- Memory Information: Displays Memory Installed, Memory Available, Memory Speed, Memory Channels Mode, Memory Technology, DIMM ASize, DIMM B Size, - Processor Information: Displays Processor Type, Core Count, Processor ID, Current Clock Speed, Minimum Clock Speed, Maximum Clock Speed, Processor L2 Cache, Processor L3 Cache, HT Capable, and 64-Bit Technology. - Device Information: Displays Primary Hard Drive, M.2 SATA2, M.2 SATA, M.2 PCIe SSD-0, LOM MAC Address, Video Controller, Video BIOS Version, Video Memory, Panel Type, Native Resolution, Audio Controller, Wi-Fi Device, WiGig Device, Cellular Device, Bluetooth Device.
Battery Information	Displays the battery status and the type of AC adapter connected to the computer.
Boot Sequence	Allows you to change the order in which the computer attempts to find an operating system. - Diskette Drive - Internal HDD - USB Storage Device - CD/DVD/CD-RW Drive - Onboard NIC
Advanced Boot Options	This option allows you the legacy option ROMs to load. By default, the Enable Legacy Option ROMs is disabled.
UEFI Booth Path Security	This options controls whether or not the system will prompt the user to enter the Admin password when booting a UEFI boot path from the F12 Boot Menu. - Always, Except Internal HDD - Always - Never (by default enabled)
Date/Time	Allows you to change the date and time.

System Configuration screen options

Option	Description
Integrated NIC	Allows you to configure the integrated network controller. The options are: - Disabled - Enabled - Enabled w/PXE: This option is enabled by default.
Parallel Port	Allows you to configure the parallel port on the docking station. The options are: - Disabled - AT: This option is enabled by default. - PS2 - ECP
Serial Port	Allows you to configure the integrated serial port. The options are: - Disabled - COM1: This option is enabled by default. - COM2 - COM3

Option	Description COM4
SATA Operation	Allows you to configure the internal SATA hard-drive controller. The options are: - Disabled - AHCI - RAID On: This option is enabled by default.
Drives	Allows you to configure the SATA drives on board. All drives are enabled by default. The options are: - SATA-0 - SATA-2 - SATA-4 - M.2 PCI-e SSD-0
SMART Reporting	This field controls whether hard drive errors for integrated drives are reported during system startup. This technology is part of the SMART (Self Monitoring Analysis and Reporting Technology) specification. This option is disabled by default. Enable SMART Reporting
USB Configuration	This is an optional feature. This field configures the integrated USB controller. If Boot Support is enabled, the system is allowed to boot any type of USB Mass Storage Devices (HDD, memory key, floppy). If USB port is enabled, device attached to this port is enabled and available for OS. If USB port is disabled, the OS cannot see any device attached to this port. The options are: - Enable USB Boot Support (by default enable) - Enable External USB Port (by default enable) - Enable Thunderbolt Ports (by default enable) - Enable Thunderbolt Boot Support - Always Allow Dell Docks (by default enable) - Enable Thunderbolt (ans PCIe behind TBT) Pre-boot - Security level — No Secuirty - Security level — User Configuration(by default enable) - Security level — Secure connect - Security level — Display Port Only  NOTE: USB keyboard and mouse always work in the BIOS setup irrespective of these settings.
USB PowerShare	This field configures the USB PowerShare feature behavior. This option allows you to charge external devices using the stored system battery power through the USB PowerShare port.
Audio	This field enables or disables the integrated audio controller. By default, the Enable Audio option is selected. The options are: - Enable Microphone (by default enable) - Enable Internal Speaker (by default enable)

Option	Description
Keyboard Illumination	This field lets you choose the operating mode of the keyboard illumination feature. The keyboard brightness level can be set from 0% to 100%. The options are: • Disabled • Dim • Bright (enabled by default)
Keyboard Backlight Timeout on AC	The Keyboard Backlight Timeout dims out with AC option. The main keyboard illumination feature is not affected. Keyboard Illumination will continue to support the various illumination levels. This field has an effect when the backlight is enabled. • 5 seconds • 10 seconds (enabled by default) • 15 seconds • 30 seconds • 1 minute • 5 minutes • 15 minutes • Never
Keyboard Backlight Timeout on Battery	The Keyboard Backlight Timeout dims out with Battery option. The main keyboard illumination feature is not affected. Keyboard Illumination will continue to support the various illumination levels. This field has an effect when the backlight is enabled. • 5 seconds • 10 seconds (enabled by default) • 15 seconds • 30 seconds • 1 minute • 5 minutes • 15 minutes • Never
Keyboard Backlight with AC	The Keyboard Backlight with AC option does not affect the main keyboard illumination feature. Keyboard Illumination will continue to support the various illumination levels. This field has an effect when the backlight is enabled.
Touchscreen	This field controls whether the touchscreen is enabled or disabled. • Touchscreen (enabled by default)
Unobtrusive Mode	This option, when enabled, pressing Fn+F7 turns off all light and sound emissions in the system. To resume normal operation, press Fn+F7 again. This option is disabled by default.
Miscellaneous Devices	Allows you to enable or disable the following devices: • Enable Camera —enabled by default • Enable Hard Drive Free Fall Protection (enabled by default) • Enable Secure Digital (SD) Card (enabled by default) • Secure Digital (SD) Card Boot • Secure Digital (SD) Card Read — only Mode

Video screen options

Option	Description
LCD Brightness	Allows you to set the display brightness depending up on the power source (On Battery and On AC).

 **NOTE:** The video setting will be visible only when a video card is installed into the system.

Security screen options

Option	Description
Admin Password	Allows you to set, change, or delete the administrator (admin) password.  NOTE: You must set the admin password before you set the system or hard drive password. Deleting the admin password automatically deletes the system password and the hard drive password.  NOTE: Successful password changes take effect immediately. Default setting: Not set
System Password	Allows you to set, change or delete the system password.  NOTE: Successful password changes take effect immediately. Default setting: Not set
M.2 SATA SSD Password	Allows you to set, change, or delete the M.2 SATA SSD password.  NOTE: Successful password changes take effect immediately. Default setting: Not set
Strong Password	Allows you to enforce the option to always set strong passwords. Default Setting: Enable Strong Password is not selected.  NOTE: If Strong Password is enabled, Admin and System passwords must contain at least one uppercase character, one lowercase character and be at least 8 characters long.
Password Configuration	Allows you to determine the minimum and maximum length of Administrator and System passwords.
Password Bypass	Allows you to enable or disable the permission to bypass the System and the Internal HDD password, when they are set. The options are: • Disabled • Reboot bypass Default setting: Disabled
Password Change	Allows you to enable the disable permission to the System and Hard Drive passwords when the admin password is set. Default setting: Allow Non-Admin Password Changes is selected.
Non-Admin Setup Changes	Allows you to determine whether changes to the setup options are allowed when an Administrator Password is set. If disabled the setup options are locked by the admin password.

Option	Description
UEFI Capsule Firmware Updates	Allows you to control whether this system allows BIOS updates via UEFI capsule update packages. • Enable UEFI Capsule Firmware Updates (enabled by default)
TPM 2.0 Security	Allows you to enable the Trusted Platform Module (TPM) during POST. The options are: • TPM On (enabled by default) • Clear • PPI Bypass for Enabled Commands(enabled by default) • Attestation Enable (enabled by default) • Key Storage Enable (enabled by default) • PPI Bypass for Disabled Commands • SHA-256 (enabled by default) • Disabled • Enabled  NOTE: To upgrade or downgrade TPM1.2/2.0, download the TPM wrapper tool (software).
Computrace	Allows you to activate or disable the optional Computrace software The options are: • Deactivate • Disable • Activate  NOTE: The Activate and Disable options will permanently activate or disable the feature and no further changes will be allowed Default setting: Deactivate
CPU XD Support	Allows you to enable the Execute Disable mode of the processor. Enable CPU XD Support (default)
OROM Keyboard Access	Allows you to set an option to enter the Option ROM Configuration screens using hotkeys during boot. The options are: • Enable • One Time Enable • Disable Default setting: Enable
Admin Setup Lockout	Allows you to prevent users from entering Setup when an Administrator password is set. Default Setting: Disabled
Master Password Lockout	Allows you to disable master password support. Hard disk password need to be cleared before the setting can be changed • Enable Master Password Lockout (Disabled)

Secure Boot screen options

Option	Description
Secure Boot Enable	This option enables or disables the Secure Boot feature. • Disabled • Enabled Default setting: Enabled.
Expert Key Management	Allows you to manipulate the security key databases only if the system is in Custom Mode. The Enable Custom Mode option is disabled by default. The options are: • PK • KEK • db • dbx If you enable the Custom Mode, the relevant options for PK, KEK, db, and dbx appear. The options are: • Save to File—Saves the key to a user-selected file • Replace from File—Replaces the current key with a key from a user-selected file • Append from File—Adds a key to the current database from a user-selected file • Delete—Deletes the selected key • Reset All Keys—Resets to default setting • Delete All Keys—Deletes all the keys  NOTE: If you disable the Custom Mode, all the changes made will be erased and the keys will restore to default settings.

Intel Software Guard Extensions

Option	Description
Intel SGX Enable	This field specifies you to provide a secured environment for running code/storing sensitive information in the context of the main OS. The options are: • Disabled • Enabled • Software Controlled: This option is enabled by default.
Enclave Memory Size	This option sets SGX Enclave Reserve Memory Size. The options are: • 32 MB • 64 MB • 128 MB

Performance screen options

Option	Description
Multi Core Support	This field specifies whether the process has one or all cores enabled. The performance of some applications improves with the additional cores. • All (By default enabled) • 1 • 2 • 3
Intel SpeedStep	Allows you to enable or disable the Intel SpeedStep feature. • Enable Intel SpeedStep Default setting: The option is enabled.
C-States Control	Allows you to enable or disable the additional processor sleep states. • C states Default setting: The option is enabled.
Intel TurboBoost	Allows you to enable or disable the Intel TurboBoost mode of the processor. • Enable Intel TurboBoost Default setting: The option is enabled.

Power Management screen options

Option	Description
AC Behavior	Allows you to enable or disable the computer from turning on automatically when an AC adapter is connected. Default setting: Wake on AC is not selected.
Auto On Time	Allows you to set the time at which the computer must turn on automatically. The options are: • Disabled • Every Day • Weekdays • Select Days Default setting: Disabled
USB Wake Support	Allows you to enable USB devices to wake the system from Standby.  NOTE: This feature is only functional when the AC power adapter is connected. If the AC power adapter is removed during Standby, the system setup removes power from all the USB ports to conserve battery power. • Enable USB Wake Support • Wake on Dell USB-C Dock (By default enable)

Option	Description
Wireless Radio Control	Allows you to enable or disable the feature that automatically switches from wired or wireless networks without depending on the physical connection. • Control WLAN Radio • Control WWAN Radio Default setting: The option is disabled.
Wake on LAN/WLAN	Allows you to enable or disable the feature that powers on the computer from the Off state when triggered by a LAN signal. • Disabled • LAN Only • WLAN Only • LAN or WLAN Default setting: Disabled
Block Sleep	This option lets you block entering to sleep (S3 state) in operating system environment. Block Sleep (S3 state) Default setting: This option is disabled
Peak Shift	This option enables you to minimize the AC power consumption during the peak power times of day. After you enable this option, your system runs only in battery even if the AC is attached.
Advanced Battery Charge Configuration	This option enables you to maximize the battery health. By enabling this option, your system uses the standard charging algorithm and other techniques, during the non-work hours to improve the battery health. Disabled Default setting: Disabled
Primary Battery Charge Configuration	Allows you to select the charging mode for the battery. The options are: • Adaptive • Standard — Fully charges your battery at a standard rate. • ExpressCharge — The battery charges over a shorter period of time using Dell's fast charging technology. This option is enabled by default. • Primarily AC use • Custom If Custom Charge is selected, you can also configure Custom Charge Start and Custom Charge Stop.  NOTE: All charging mode may not be available for all the batteries. To enable this option, disable the Advanced Battery Charge Configuration option.
Sleep Mode	This option is used to select which sleep mode will be used by operating system. • OS Automatic Selection • Force S3 (By default enable)
Type-C Connector Power	This option lets you set the maximum power that can be drawn from the USB Type-C connector. • 7.5 Watts (By default enable)

Option	Description
	15 Watts

POST Behavior screen options

Option	Description
Adapter Warnings	Allows you to enable or disable the system setup (BIOS) warning messages when you use certain power adapters. Default setting: Enable Adapter Warnings
Keypad (Embedded)	Allows you to choose one of two methods to enable the keypad that is embedded in the internal keyboard. - Fn Key Only: This option is enabled by default. - By Numlock  NOTE: When setup is running, this option has no effect. Setup works in Fn Key Only mode.
Mouse/Touchpad	Allows you to define how the system handles mouse and touch pad input. The options are: - Serial Mouse - PS2 Mouse - Touchpad/PS-2 Mouse: This option is enabled by default.
Numlock Enable	Allows you to enable the Numlock option when the computer boots. Enable Network. This option is enabled by default.
Fn Key Emulation	Allows you to set the option where the Scroll Lock key is used to simulate the Fn key feature. Enable Fn Key Emulation (default)
Fn Lock Options	Allows you to let hot key combinations Fn + Esc toggle the primary behavior of F1–F12, between their standard and secondary functions. If you disable this option, you cannot toggle dynamically the primary behavior of these keys. The available options are: - Fn Lock. This option is selected by default. - Lock Mode Disable/Standard - Lock Mode Enable/Secondary
Fastboot	Allows you to speed up the boot process by bypassing some of the compatibility steps. The options are: - Minimal - Thorough (default) - Auto
Extended BIOS POST Time	Allows you to create an additional preboot delay. The options are: 0 seconds. This option is enabled by default. 5 seconds 10 seconds
Full Screen Logo	This option will display full screen logo if your image match screen resolution Enable Full Screen Logo

Option	Description
Warnings and Error	This option will cause the boot process to only pause when warnings or errors are detected. • Prompt on Warnings and Errors This option is enabled by default. • Continue on Warnings • Continue on Warnings and Errors  NOTE: Error deemed critical to the operation of the system hardware will always halt the system.
Virtualization support screen options	
Virtualization	Allows you to enable or disable the Intel Virtualization Technology. Enable Intel Virtualization Technology: This option is enabled by default.
VT for Direct I/O	Enables or disables the Virtual Machine Monitor (VMM) from utilizing the additional hardware capabilities provided by Intel® Virtualization technology for direct I/O. Enable VT for Direct I/O: This option is enabled by default.
Trusted Execution	This option specifies whether a Measured Virtual Machine Monitor (MVMM) can utilize the additional hardware capabilities provided by Intel Trusted Execution Technology. The TPM Virtualization Technology, and Virtualization technology for direct I/O must be enabled to use this feature. Trusted Execution: This option is enabled by default.

Wireless screen options

Option	Description
Wireless Switch	Allows to set the wireless devices that can be controlled by the wireless switch. The options are: • WWAN • GPS (on WWAN Module) • WLAN/WiGig • Bluetooth All the options are enabled by default.  NOTE: For WLAN and WiGig enable or disable controls are tied together and they cannot be enabled or disabled independently.
Wireless Device Enable	Allows you to enable or disable the internal wireless devices. • WWAN/GPS • WLAN/WiGig • Bluetooth All the options are enabled by default.

Maintenance screen options

Option	Description
Service Tag	Displays the Service Tag of your computer.
Asset Tag	Allows you to create a system asset tag if an asset tag is not already set. This option is not set by default.
BIOS Downgrade	This controls flashing of the system firmware to previous revisions. • Allows BIOS Downgrade (enabled by default)
Data Wipe	This field allows users to erase the data securely from all internal storage devices. The following is list of devices affected: • Internal SATA HDD/SSD • Internal M.2 SATA SDD • Internal M.2 PCIe SSD • Internal eMMC
BIOS Recovery	This field allows you to recover from certain corrupted BIOS conditions from a recover file on the user primary hard drive or an external USB key. • BIOS Recovery from Hard Drive (enabled by default) • BIOS Auto-Recovery • Always perform Integrity Check

System Log screen options

Option	Description
BIOS Events	Allows you to view and clear the System Setup (BIOS) POST events.
Thermal Events	Allows you to view and clear the System Setup (Thermal) events.
Power Events	Allows you to view and clear the System Setup (Power) events.

Updating the BIOS in Windows

It is recommended to update your BIOS (System Setup), when you replace the system board or if an update is available. For laptops, ensure that your computer battery is fully charged and connected to a power outlet

NOTE: If BitLocker is enabled, it must be suspended prior to updating the system BIOS, and then re-enabled after the BIOS update is completed.

- 1 Restart the computer.
- 2 Go to **Dell.com/support**.
 - Enter the **Service Tag** or **Express Service Code** and click **Submit**.
 - Click **Detect Product** and follow the instructions on screen.
- 3 If you are unable to detect or find the Service Tag, click **Choose from all products**.
- 4 Choose the **Products** category from the list.

NOTE: Choose the appropriate category to reach the product page

- 5 Select your computer model and the **Product Support** page of your computer appears.
- 6 Click **Get drivers** and click **Drivers and Downloads**.
The Drivers and Downloads section opens.

- 7 Click **Find it myself**.
- 8 Click **BIOS** to view the BIOS versions.
- 9 Identify the latest BIOS file and click **Download**.
- 10 Select your preferred download method in the **Please select your download method below** window, click **Download File**.
The **File Download** window appears.
- 11 Click **Save** to save the file on your computer.
- 12 Click **Run** to install the updated BIOS settings on your computer.
Follow the instructions on the screen.

 **NOTE:** It is recommended not to update the BIOS version for more than three revisions. For example: If you want to update the BIOS from 1.0 to 7.0, then install version 4.0 first and then install version 7.0.

System and setup password

Table 20. System and setup password

Password type	Description
System password	Password that you must enter to log on to your system.
Setup password	Password that you must enter to access and make changes to the BIOS settings of your computer.

You can create a system password and a setup password to secure your computer.

 **CAUTION:** The password features provide a basic level of security for the data on your computer.

 **CAUTION:** Anyone can access the data stored on your computer if it is not locked and left unattended.

 **NOTE:** System and setup password feature is disabled.

Assigning a system password and setup password

You can assign a new **System Password** only when the status is in **Not Set**.

To enter the system setup, press F2 immediately after a power-on or re-boot.

- 1 In the **System BIOS** or **System Setup** screen, select **Security** and press Enter.
The **Security** screen is displayed.
- 2 Select **System Password** and create a password in the **Enter the new password** field.
Use the following guidelines to assign the system password:
 - A password can have up to 32 characters.
 - The password can contain the numbers 0 through 9.
 - Only lower case letters are valid, upper case letters are not allowed.
 - Only the following special characters are allowed: space, ("), (+), (.), (-), (.), (/), (:), ([), (\), (]), (`).
- 3 Type the system password that you entered earlier in the **Confirm new password** field and click **OK**.
- 4 Press Esc and a message prompts you to save the changes.
- 5 Press Y to save the changes.
The computer reboots.

Deleting or changing an existing system setup password

Ensure that the **Password Status** is Unlocked (in the System Setup) before attempting to delete or change the existing System and/or Setup password. You cannot delete or change an existing System or Setup password, if the **Password Status** is Locked. To enter the System Setup, press F2 immediately after a power-on or reboot.

- 1 In the **System BIOS** or **System Setup** screen, select **System Security** and press Enter.
The **System Security** screen is displayed.
- 2 In the **System Security** screen, verify that **Password Status** is **Unlocked**.
- 3 Select **System Password**, alter or delete the existing system password and press Enter or Tab.
- 4 Select **Setup Password**, alter or delete the existing setup password and press Enter or Tab.

 **NOTE:** If you change the System and/or Setup password, re-enter the new password when promoted. If you delete the System and/or Setup password, confirm the deletion when promoted.

- 5 Press Esc and a message prompts you to save the changes.
- 6 Press Y to save the changes and exit from System Setup.
The computer reboot.

Software

Supported operating systems

The following list shows supported operating systems

Table 21. Supported operating systems

Supported operating systems	Operating System Description
Microsoft Windows	- Microsoft Windows 10 Pro (64-bit) - Microsoft Windows 10 Home (64-bit)
Other	Ubuntu
OS Media Support	- Dell.com/support to download eligible Windows OS - USB media available for upsell

Downloading drivers

- 1 Turn on the laptop.
- 2 Go to **Dell.com/support**.
- 3 Click **Product Support**, enter the Service Tag of your laptop, and then click **Submit**.
***NOTE:** If you do not have the Service Tag, use the auto detect feature or manually browse for your laptop model.*
- 4 Click **Drivers and Downloads**.
- 5 Select the operating system installed on your laptop.
- 6 Scroll down the page and select the driver to install.
- 7 Click **Download File** to download the driver for your laptop.
- 8 After the download is complete, navigate to the folder where you saved the driver file.
- 9 Double-click the driver file icon and follow the instructions on the screen.

Downloading the chipset driver

- 1 Turn on the laptop.
- 2 Go to **Dell.com/support**.
- 3 Click **Product Support**, enter the Service Tag of your laptop, and then click **Submit**.
***NOTE:** If you do not have the Service Tag, use the autodetect feature or manually browse for your laptop model.*
- 4 Click **Drivers and Downloads**.
- 5 Select the operating system installed on your laptop.
- 6 Scroll down the page, expand **Chipset**, and select your chipset driver.
- 7 Click **Download File** to download the latest version of the chipset driver for your laptop.
- 8 After the download is complete, navigate to the folder where you saved the driver file.
- 9 Double-click the chipset driver file icon and follow the instructions on the screen.

Intel chipset drivers

Verify if the Intel chipset drivers are already installed in the laptop.

Table 22. Intel chipset drivers

Before installation	After installation
Other devices PCI Data Acquisition and Signal Processing Controller PCI Device PCI Memory Controller PCI Simple Communications Controller SM Bus Controller Unknown device System devices ACPI Fan ACPI Fan ACPI Fan ACPI Fan ACPI Fan ACPI Fixed Feature Button ACPI Power Button ACPI Processor Aggregator ACPI Thermal Zone ACPI Thermal Zone Composite Bus Enumerator High Definition Audio Controller High precision event timer Intel(R) Power Engine Plug-in Legacy device Microsoft ACPI-Compliant Embedded Controller Microsoft ACPI-Compliant System Microsoft System Management BIOS Driver Microsoft UEFI-Compliant System Microsoft Virtual Drive Enumerator Microsoft Windows Management Interface for ACPI Microsoft Windows Management Interface for ACPI NDIS Virtual Network Adapter Enumerator Numeric data processor PCI Express Root Complex PCI Express Root Port PCI Express Root Port PCI Express Root Port PCI standard host CPU bridge PCI standard ISA bridge Plug and Play Software Device Enumerator Programmable interrupt controller Remote Desktop Device Redirector Bus System CMOS/real time clock System timer UMBus Root Bus Enumerator	Other devices PCI Device PCI Simple Communications Controller Unknown device System devices ACPI Fan ACPI Fan ACPI Fan ACPI Fan ACPI Fan ACPI Fixed Feature Button ACPI Lid ACPI Processor Aggregator ACPI Sleep Button ACPI Thermal Zone ACPI Thermal Zone Camera Sensor OV9670 Camera Sensor OV8858 Composite Bus Enumerator High precision event timer Intel(R) 100 Series Chipset Family LPC Controller/iSPI Controller - 9046 Intel(R) 100 Series Chipset Family PCI Express Root Port #10 - 9019 Intel(R) 100 Series Chipset Family PCI Express Root Port #9 - 9018 Intel(R) 100 Series Chipset Family PMC - 9021 Intel(R) 100 Series Chipset Family SMBUS - 9023 Intel(R) 100 Series Chipset Family Thermal subsystem - 9031 Intel(R) CIO2 Host Controller Intel(R) Control Logic Intel(R) Imaging Signal Processor 2500 Intel(R) Integrated Sensor Solution Intel(R) Management Engine Interface Intel(R) Power Engine Plug-in Intel(R) Serial IO I/O Host Controller - INT3448 Intel(R) Serial IO I/O Host Controller - 9060 Intel(R) Serial IO I/O Host Controller - 9061 Intel(R) Serial IO I/O Host Controller - 9062 Intel(R) Serial IO I/O Host Controller - 9063

Intel HD Graphics drivers

Verify if the Intel HD Graphics drivers are already installed in the laptop.

Table 23. Intel HD Graphics drivers

Before installation	After installation
Display adapters Microsoft Basic Display Adapter Sound, video and game controllers High Definition Audio Device High Definition Audio Device	Sound, video and game controllers Intel(R) Display Audio Realtek(R) Audio

Getting help

Contacting Dell

NOTE: If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

- 1 Go to **Dell.com/support**.
- 2 Select your support category.
- 3 Verify your country or region in the **Choose a Country/Region** drop-down list at the bottom of the page.
- 4 Select the appropriate service or support link based on your need.