

Dell Latitude 5401

Setup and specifications guide



Identifier	GUID-5B8DE7B7-879F-45A4-88E0-732155904029
Status	Released

Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

© 2018 - 2019 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

Contents

1 Set up your Latitude 5401.....	5
2 Create a USB recovery drive for Windows.....	7
3 Chassis overview.....	8
Display view.....	8
Left view.....	9
Right view.....	9
Palmrest view.....	10
Bottom view.....	12
4 Technical specifications.....	13
Chipset.....	13
Processors.....	13
Memory.....	14
Ports and connectors.....	14
Storage.....	15
Dimensions and weight.....	15
Operating system.....	15
Communications.....	16
Mobile broadband.....	16
Audio.....	17
Media-card reader.....	17
Keyboard.....	17
Camera.....	18
Touchpad.....	19
Touchpad gestures.....	19
Power adapter.....	19
Battery.....	20
Display.....	21
Fingerprint reader (optional).....	21
Video.....	22
Computer environment.....	22
Security.....	23
Security options—Contacted smartcard reader.....	23
Security options—Contactless smartcard reader.....	24
Security Software.....	25
5 Keyboard shortcuts.....	27
6 Software.....	29
Downloading drivers.....	29
7 System setup.....	30

Boot menu.....	30
Navigation keys.....	30
Boot Sequence.....	31
System setup options.....	31
General options.....	32
System information.....	32
Video.....	34
Security.....	34
Secure boot.....	35
Intel Software Guard Extensions.....	36
Performance.....	37
Power management.....	37
POST behavior.....	38
Manageability.....	39
Virtualization support.....	39
Wireless.....	40
Maintenance screen.....	40
System logs.....	40
Updating the BIOS in Windows	41
Updating BIOS on systems with BitLocker enabled.....	41
Updating your system BIOS using a USB flash drive.....	41
System and setup password.....	42
Assigning a system setup password.....	42
Deleting or changing an existing system setup password.....	43
8 Getting help.....	44
Contacting Dell.....	44

Identifier	GUID-45ECE2AD-8A52-4BE5-B102-086B01BF411C
Status	Released

Set up your Latitude 5401

NOTE: The images in this document may differ from your computer depending on the configuration you ordered.

1. Connect the power adapter and press the power button.



NOTE: To conserve battery power, the battery might enter power saving mode. Connect the power adapter and press the power button to turn on the computer.


2. Finish Windows setup.

Follow the on-screen instructions to complete the setup. When setting up, Dell recommends that you:

- Connect to a network for Windows updates.
- **NOTE:** If connecting to a secured wireless network, enter the password for the wireless network access when prompted.
- If connected to the internet, sign-in with or create a Microsoft account. If not connected to the internet, create an offline account.
- On the **Support and Protection** screen, enter your contact details.

3. Locate and use Dell apps from the Windows Start menu—Recommended

Table 1. Locate Dell apps

Resources	Description
	<p>My Dell</p> <p>Centralized location for key Dell applications, help articles, and other important information about your computer. It also notifies you about the warranty status, recommended accessories, and software updates if available.</p>

Resources

Description



SupportAssist

Pro-actively checks the health of your computer's hardware and software. The SupportAssist OS Recovery tool troubleshoots issues with the operating system. For more information, see the SupportAssist documentation at www.dell.com/support.

NOTE: In SupportAssist, click the warranty expiry date to renew or upgrade your warranty.



Dell Update

Updates your computer with critical fixes and latest device drivers as they become available. For more information about using Dell Update, see the knowledge base article [SLN305843](https://www.dell.com/support/SLN305843) at www.dell.com/support.



Dell Digital Delivery

Download software applications, which are purchased but not pre-installed on your computer. For more information about using Dell Digital Delivery, see the knowledge base article [153764](https://www.dell.com/support/153764) at www.dell.com/support.

4. Create recovery drive for Windows.

NOTE: It is recommended to create a recovery drive to troubleshoot and fix problems that may occur with Windows.

For more information, see [Create a USB recovery drive for Windows](#).

Identifier	GUID-2D4FD3BB-D11E-4568-9B46-51EF228459EA
Status	Released

Create a USB recovery drive for Windows

Create a recovery drive to troubleshoot and fix problems that may occur with Windows. An empty USB flash drive with a minimum capacity of 16 GB is required to create the recovery drive.

NOTE: This process may take up to an hour to complete.

NOTE: The following steps may vary depending on the version of Windows installed. Refer to the [Microsoft support site](#) for latest instructions.

1. Connect the USB flash drive to your computer.
2. In Windows search, type *Recovery*.
3. In the search results, click **Create a recovery drive**.
The **User Account Control** window is displayed.
4. Click **Yes** to continue.
The **Recovery Drive** window is displayed.
5. Select **Back up system files to the recovery drive** and click **Next**.
6. Select the **USB flash drive** and click **Next**.
A message appears, indicating that all data in the USB flash drive will be deleted.
7. Click **Create**.
8. Click **Finish**.
For more information about reinstalling Windows using the USB recovery drive, see the *Troubleshooting* section of your product's *Service Manual* at www.dell.com/support/manuals.

Identifier	GUID-E2915B54-6C0A-41EB-9BAD-A5EE2F68190F
Status	Released


Chassis overview

Topics:

- [Display view](#)
- [Left view](#)
- [Right view](#)
- [Palmrest view](#)
- [Bottom view](#)

Identifier	GUID-6EA8D55F-CE6F-47C3-B17E-DFEF46B2B092
Status	Released

Display view

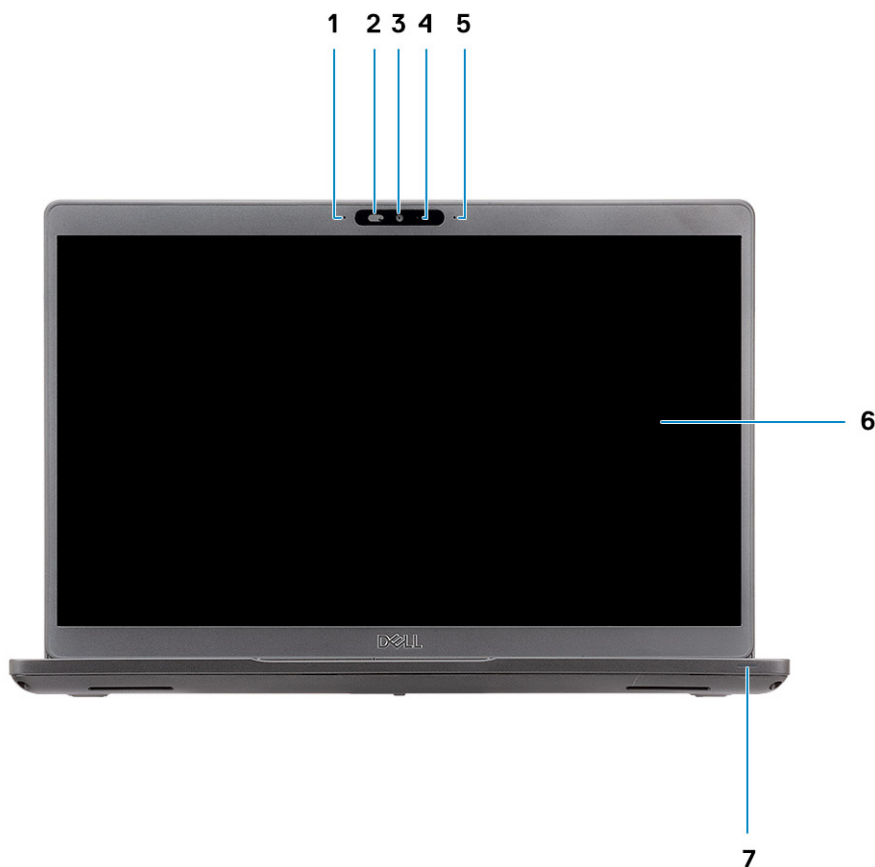

1. Array microphone
2. Camera shutter
3. Camera
4. Camera status light
5. Array microphone

- 6. LCD panel
- 7. LED activity light

Identifier	GUID-98DA4F7C-EECF-45EE-B79A-881FFA8ABF9C
Status	Released


Left view



- 1. Power connector port
- 2. USB 3.1 Gen 2(USB Type-C) port with Thunderbolt
- 3. USB 3.1 Gen 1 port
- 4. Smart card reader (optional)

Identifier	GUID-BAAE19B3-EA97-46A6-8033-9D1DA79CBF78
Status	Released

Right view

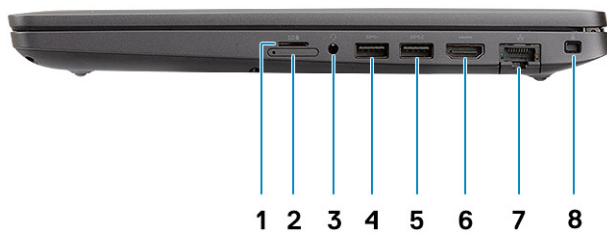

- 1. microSD card reader
- 2. micro-SIM card slot (optional)
- 3. Headset/ Microphone port
- 4. USB 3.1 Gen 1 port
- 5. USB 3.1 Gen 1 port with PowerShare
- 6. HDMI port
- 7. Network port

8. Wedge-shaped lock slot

Identifier
Status

GUID-8C870C06-D314-4B02-A718-74F7B8030637
Released

Palmrest view



1. Power button with optional fingerprint
2. Keyboard
3. Contactless smart card reader (optional)
4. Touchpad




1. Power button with optional fingerprint
2. Keyboard
3. Touchpad

Identifier
Status

GUID-267B22C4-7360-4373-B88A-CF9740CEAB5B
Released

Bottom view

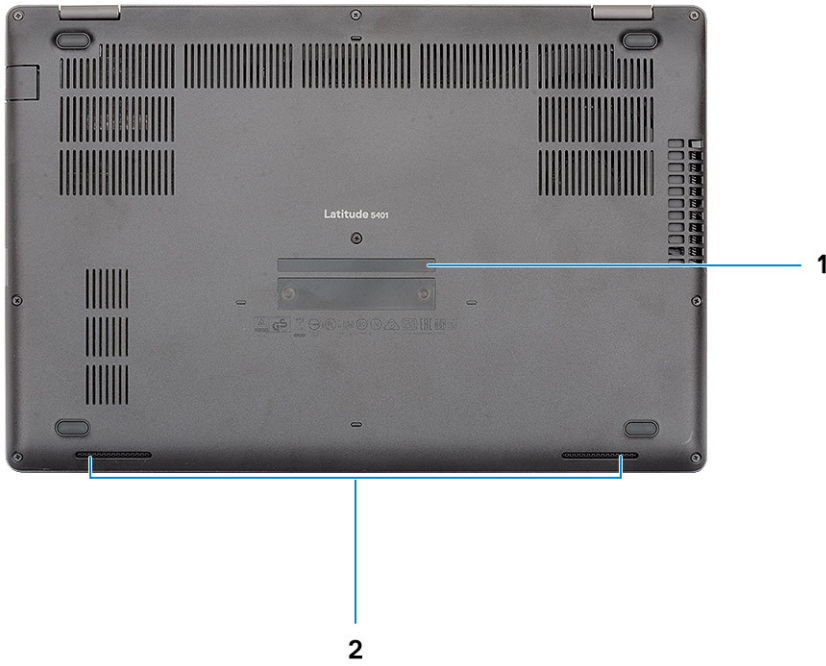

1. Service tag label
2. Speakers

Identifier	GUID-26CC9B57-795F-4689-8649-667D70D1F3BD
Status	Released

Technical specifications

Identifier	GUID-9735FCAB-1A62-42BB-A7CD-04A062AEF546
Status	Released

Chipset

Table 2. Chipset

Description	Values
Chipset	CM246
Processor	9th Generation Intel Core i5/i7
DRAM bus width	Dual 64 bit
Flash EPROM	24/32 MB(32 MB for Vpro SKU)
PCIe bus	PCIe 3.0

Identifier	GUID-BFA52F40-8AD1-4DF0-8D0F-942766BC2118
Status	Released

Processors

Table 3. Processors

Description	Values		
Processors	9th Generation Intel Core i5-9300H	9th Generation Intel Core i5-9400H	9th Generation Intel Core i7-9850H
Wattage	35 W	35 W	35 W
Core count	4	4	6
Thread count	8	8	12
Speed	4.1 GHz	4.3 GHz	4.6 GHz
Cache	8M	8M	12M
Integrated graphics	Intel UHD Graphics 630	Intel UHD Graphics 630	Intel UHD Graphics 630

Identifier	GUID-F07064B8-2EB4-49EC-88A8-43B102E42417
Status	Released

Memory

Table 4. Memory specifications

Description	Values
Slots	Two-SODIMM slots
Type	Dual-channel DDR4
Speed	2666 MHz
Maximum memory	32 GB
Minimum memory	4 GB
Memory size per slot	16 GB
Configurations supported	<ul style="list-style-type: none"> · 8 GB DDR4 (2 x 4 GB) · 8 GB DDR4 (1 x 8 GB) · 16 GB DDR4 (2 x 8 GB) · 16 GB DDR4 (1 x 16 GB) · 32 GB DDR4 (2 x 16 GB)

Identifier	GUID-29AB3B25-B4D9-4B9A-B1BF-821E8A6A7B8F
Status	Released

Ports and connectors

Table 5. External ports and connectors

Description	Values
External:	
Network	One RJ-45, 10/100/1000
USB	<ul style="list-style-type: none"> · Two USB 3.1 Gen 1 port · One USB 3.1 Gen 1 with PowerShare · One USB 3.1 Gen 2 (Type-C) with Thunderbolt
Audio	One Universal Jack (headset + mic phone in + line in support) port
Video	One HDMI 2.0 port
Media card reader	One SD-card slot (Optional), One microSD- card slot
Docking port	Supported
Power adapter port	One
Security	Wedge-shaped lock slot

Table 6. Internal ports and connectors

Description	Values
Internal:	

Description	Values
M.2	One M.2 2280/2230 slot for solid-state drive
	NOTE: To learn more about the features of different types of M.2 cards, see the knowledge base article SLN301626 .

Identifier	GUID-0ADBC39B-BF43-40EB-BFC0-6F7114D249D1
Status	Released

Storage

Your computer supports one of the following configurations:

- 2.5-inch 5400rpm hard-disk drive
- 2.5 inch 7200rpm Hard-drive drive
- M.2 2230 solid-state drive
- M.2 2280 solid-state drive

Table 7. Storage specifications

Storage type	Interface type	Capacity
2.5-inch 5400rpm hard-disk drive	SATA up to 6 Gbps	Up to 1 TB
2.5 inch 7200rpm Hard-drive drive	SATA up to 6 Gbps	Up to 1 TB
M.2 2230 solid-state drive PCIe NVMe	PCIe Gen3x2 NVMe, up to 16 Gbps	Up to 512 GB
M.2 2280 solid-state drive PCIe NVMe	PCIe Gen3x4 NVMe, up to 32 Gbps	Up to 1 TB
M.2 2280 solid-state drive Class 20	SATA Class 20	Up to 512 GB

Identifier	GUID-7DF32F47-45CF-4A08-AD99-B01EEC4F3CE6
Status	Released

Dimensions and weight

Table 8. Dimensions and weight

Description	Values
Height:	
Front	20.4 mm (0.8 in.)
Rear	22.85 mm (0.9 in.)
Width	323.05 mm (12.72 in.)
Depth	216 mm (8.5 in.)
Weight	1.53 kg (3.37 lb)
	NOTE: The weight of your computer depends on the configuration ordered and the manufacturing variability.

Identifier	GUID-2959A596-4E1F-4C1B-9E6C-857583B2F398
Status	Released

Operating system

- Windows 10 Home (64-bit)

- Windows 10 Professional (64-bit)
- Windows 10 Pro for Workstations (64-bit)
- Red Hat 7.5

Identifier	GUID-25120817-DDDF-4AED-BAF6-CD32F9074C86
Status	Released

Communications

Ethernet

Table 9. Ethernet specifications

Description	Values
Model number	Integrated Connection I219-LM/I219-V Ethernet (RJ-45)
Transfer rate	10/100/1000

Wireless module

Table 10. Wireless module specifications

Description	Values		
Model number	Intel Dual Band Wireless AC 9560 (802.11ac) 2x2 + Bluetooth 5.0	Qualcomm QCA61x4A (DW1820) 802.11ac Dual Band (2x2) Wireless Adapter + Bluetooth 4.2	Intel AX200 + Bluetooth 5.0
Transfer rate	1.73 Gbps	<ul style="list-style-type: none"> • 802.11ac - Up to 867 Mbps • 802.11n - Up to 450 Mbps • 802.11a/g - Up to 54 Mbps • 802.11b - Up to 11 Mbps 	2400 Mbps
Frequency bands supported	2.4/ 5 GHz (160 MHz)	2.4 GHz (802.11b/g/n) and 5 GHz (802.11a/n/ac)	2.4/ 5 GHz
Wireless standards	WiFi 802.11b/g/a/n/ac,	<ul style="list-style-type: none"> • 802.11a, 802.11b, 802.11g, 802.11n and 802.11ac • Dual-mode Bluetooth 4.2, BLE (HW ready, SW depends on OS) 	<ul style="list-style-type: none"> • WiFi 802.11a/b/g • Wi-Fi 4 (WiFi 802.11n) • Wi-Fi 5 (WiFi 802.11ac) • Wi-Fi 6 (WiFi 802.11ax)
Encryption	64/128-bit encryption	128-bit encryption	<ul style="list-style-type: none"> • 64-bit/128-bit WEP • AES-CCMP • TKIP
Bluetooth	Bluetooth 5.0	Bluetooth 4.2	Bluetooth 5.0

Identifier	GUID-B1CB5EA4-1B5D-4E85-8719-A570DFA599F9
Status	Released

Mobile broadband

Table 11. Intel XMM 7360 Global LTE-Advanced

Description	Values
Model number	Intel XMM 7360 Global LTE-Advanced

Identifier	GUID-AD5B9ABA-9B9B-44A5-8988-23AEA8D10DF6
Status	Released

Audio

Table 12. Audio specifications

Description	Values
Controller	Realtek ALC3204
Stereo conversion	Supported
Internal interface	Intel HDA
External interface	Universal Audio Jack
Speakers	2
Internal speaker amplifier	Supported (Audio codec built-in amplifier)
External volume controls	Keyboard shortcut controls
Speaker output:	
Average	2 W
Peak	2.5 W
Subwoofer output	Not supported
Microphone	Dual-array microphones

Identifier	GUID-5A030285-DC52-439D-9856-7809E3B2E340
Status	Released

Media-card reader

Table 13. Media-card reader specifications

Description	Values
Type	<ul style="list-style-type: none"> • One microSD-card slot • One SD-card slot (Optional)
Cards supported	<ul style="list-style-type: none"> • MicroSD • SD-card (optional)

Identifier	GUID-A15BD78F-A4E0-4BCD-8B25-353A630A4965
Status	Released

Keyboard

Table 14. Keyboard specifications

Description	Values
Type	Standard keyboard
Layout	QWERTY

Description	Values
Number of keys	<ul style="list-style-type: none"> United States and Canada: 81 keys United Kingdom: 82 keys Japan: 85 keys
Size	X=19.05 mm (0.75 in.) key pitch Y=19.05 mm (0.75 in.) key pitch
Shortcut keys	<p>Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. To type the alternate character, press Shift and the desired key. To perform secondary functions, press Fn and the desired key.</p> <p>NOTE: You can define the primary behavior of the function keys (F1–F12) changing Function Key Behavior in BIOS setup program.</p> <p>Keyboard shortcuts</p>

Identifier	GUID-7CA8D522-5417-4454-AD1B-C66FCD5E923B
Status	Released

Camera

Table 15. Camera specifications

Description	Values
Number of cameras	One
Type	<ul style="list-style-type: none"> Optional RGB HD 720p camera Optional IR camera
Location	Front camera
Sensor type	CMOS sensor technology
Resolution	
Camera	
Still image	HD resolution (1280 x 720)
Video	HD resolution (1280 x 720) at 30 fps
Infrared camera	
Still image	340x340
Video	340x340 at 30 fps
Diagonal viewing angle	
Camera	87 degree
Infrared camera	53 degree

Identifier	GUID-7DF9CC74-6113-4D68-BF0B-3809800CCC56
Status	Released

Touchpad

Table 16. Touchpad specifications

Description	Values
Resolution:	
Horizontal	1221
Vertical	661
Dimensions:	
Horizontal	PCB: 101.7 mm/ active area: 99.5 mm
Vertical	PCB: 55.2 mm/ active area: 53 mm

Identifier	GUID-5475B065-BA52-41A7-B636-CFA7BBA70015
Status	Released

Touchpad gestures

For more information about touchpad gestures for Windows 10, see the Microsoft knowledge base article [4027871](https://support.microsoft.com/4027871) at support.microsoft.com.

Identifier	GUID-1AA2477F-E41B-482D-9CF7-E5D81BBD5A52
Status	Released

Power adapter

Table 17. Power adapter specifications

Description	Values	
Type	E5 90 W	E4 130 W
Diameter (connector)	7.4mm	7.4 mm
Input voltage	100 to 240 VAC	100 to 240 VAC
Input frequency	50 to 60 Hz	50 to 60 Hz
Input current (maximum)	1.6 A	1.8 A
Output current (continuous)	4.62 A (continuous)	6.7 A (continuous)
Rated output voltage	19.5 VDC	19.5 VDC
Temperature range:		
Operating	0°C to 40°C (32°F to 104°F)	0°C to 40°C (32°F to 104°F)
Storage	-40°C to 70°C (-40°F to 158°F)	-40°C to 70°C (-40°F to 158°F)

Battery

Table 18. Battery specifications

Description	Values		
Type	3 Cell 51 WHr ExpressCharge Capable Battery	4 Cell 68 WHr ExpressCharge Capable Battery	4 Cell 68 WHr Long Cycle life Battery
Voltage	11.40 VDC	15.2 VDC	15.2 VDC
Weight (maximum)	250 g (0.55 lb)	340 g (0.75 lb)	340 g (0.75 lb)
Dimensions:			
Height	7.05 mm (0.28 in.)	7.05 mm (0.28 in.)	7.05 mm (0.28in.)
Width	95.9 mm (3.78 in.)	95.9 mm (3.78 in.)	95.9 mm (3.78in.)
Depth	181 mm (7.13 in.)	233 mm (9.17 in.)	233 mm (9.17in.)
Temperature range:			
Operating	Charge: 0°C to 50°C, 32°F to 122°F; Discharge: 0°C to 60°C, 32°F to 139°F	Charge: 0°C to 50°C, 32°F to 122°F; Discharge: 0°C to 60°C, 32°F to 139°F	Charge: 0°C to 50°C, 32°F to 122°F; Discharge: 0°C to 60°C, 32°F to 139°F
Storage	-20°C to 60°C (-4°F to 140°F)	-20°C to 60°C (-4°F to 140°F)	-20°C to 60°C (-4°F to 140°F)
Operating time	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.
Charging time (approximate)	<ul style="list-style-type: none"> Standard charge: 0°C to 50°C: 4 hours Express Charge: 0°C to 15°C: 4 hours; 16°C to 45°C: 2 hours; 46°C to 50°C: 3 hours <p>i NOTE: Control the charging time, duration, start and end time, and so on using the Dell Power Manager application. For more information on the Dell Power Manager see, <i>Me and My Dell</i> on https://www.dell.com/</p>	<ul style="list-style-type: none"> Standard charge: 0°C to 50°C: 4 hours Express Charge: 0°C to 15°C: 4 hours; 16°C to 45°C: 2 hours; 46°C to 50°C: 3 hours <p>i NOTE: Control the charging time, duration, start and end time, and so on using the Dell Power Manager application. For more information on the Dell Power Manager see, <i>Me and My Dell</i> on https://www.dell.com/</p>	<ul style="list-style-type: none"> Standard charge: 0°C to 50°C: 4 hours Express Charge: 0°C to 15°C: 4 hours; 16°C to 45°C: 2 hours; 46°C to 50°C: 3 hours <p>i NOTE: Control the charging time, duration, start and end time, and so on using the Dell Power Manager application. For more information on the Dell Power Manager see, <i>Me and My Dell</i> on https://www.dell.com/</p>
Life span (approximate)	300 discharge/charge cycles	300 discharge/charge cycles	300 discharge/charge cycles
Coin-cell battery	CR-2032	CR2032	CR2032
Operating time	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.

Identifier GUID-B5960C74-4EEF-48F9-9B5F-382CFD4AE103
Status Released

Display

Table 19. Display specifications

Description	Values		
Type	High definition (HD)	Full High definition (FHD)	FHD touch panel without cover glass
Panel technology	Twisted Nematic (TN)	Wide Viewing Angle (WVA)	Wide Viewing Angle (WVA)
Luminance (typical)	220 nits	220 nits	220 nits
Dimensions (active area):			
Height	173.95 mm (6.84 in.)	173.95 mm (6.84 in.)	173.95 mm (6.84 in.)
Width	309.4 (12.18 in.)	309.4 mm (12.18 in.)	309.4 mm (12.18 in.)
Diagonal	355.6 mm (14 in.)	355.6 mm (14 in.)	355.6 mm (14 in.)
Native resolution	1366x768	1920x1080	1920 x 1080
Megapixels	1.05	2.07	2.07
Color gamut	45% (NTSC)	45% (NTSC)	45% (NTSC)
Pixels per inch (PPI)	112	157	157
Contrast ratio (min)	300:1	600:1	600:1
Response time (max)	25 ms	35 ms	35 ms
Refresh rate	60 Hz	60 Hz	60 Hz
Horizontal view angle	40(L)/40(R) degrees	80(L)/80(R) degrees	80(L)/80(R) degrees
Vertical view angle	10(U)/30(D) degrees	80(U)/80(D) degrees	80(U)/80(D) degrees
Pixel pitch	0.226 x 0.226	0.161 x 0.161	0.161 x 0.161
Power consumption (maximum)	2.4 W	2.8 W	3.15 W
Anti-glare vs glossy finish	Anti-glare	Anti-glare	Anti-glare
Touch options	No	No	Yes

Identifier GUID-4E7B949F-4FF1-4A2F-9C85-B28574514997
Status Released

Fingerprint reader (optional)

Table 20. Fingerprint reader specifications

Description	Values
Sensor technology	Capacitive
Sensor resolution	363 PPI

Description	Values
Sensor area	7.4 mm x 5.96 mm

Identifier	GUID-17B5BB86-4E67-4D23-9E5A-8ECC011AC299
Status	Released

Video

Table 21. Discrete graphics specifications

Discrete graphics			
Controller	External display support	Memory size	Memory type
Nvidia GeForce MX150 (TDP 25 W)	NA	VRAM 2 GB	GDDR5

Table 22. Integrated graphics specifications

Integrated graphics			
Controller	External display support	Memory size	Processor
Intel UHD Graphics 630	<ul style="list-style-type: none"> One HDMI 2.0 port One optional USB Type-C Port support VGA and DisplayPort 	Shared system memory	<ul style="list-style-type: none"> 9th Generation Intel Core i5-9300H 9th Generation Intel Core i5-9400H 9th Generation Intel Core i7-9850H

Identifier	GUID-529C89FC-6EBD-43BB-AD12-CF726343EB83
Status	Released

Computer environment

Airborne contaminant level: G1 as defined by ISA-S71.04-1985

Table 23. Computer environment

	Operating	Storage
Temperature range	0°C to 35°C (32°F to 95°F)	-40°C to 65°C (-40°F to 149°F)
Relative humidity (maximum)	10% to 90% (non-condensing)	10% to 95% (non-condensing)
Vibration (maximum)*	0.66 GRMS	1.37 GRMS
Shock (maximum)	140 G†	160 G‡
Altitude (maximum)	0 m to 3048 m (0 ft to 10,000 ft)	0 m to 10668 m (32 ft to 19234.4 ft)

* Measured using a random vibration spectrum that simulates user environment.

† Measured using a 2 ms half-sine pulse when the hard drive is in use.

‡ Measured using a 2 ms half-sine pulse when the hard-drive head is in parked position.

Identifier	GUID-CF12925A-8DE4-40C8-8300-9072D34BBBE4
Status	Released

Security

Table 24. Security

Feature	Specifications
Trusted Platform Module (TPM) 2.0	Integrated on the system board
Firmware TPM	Optional
Windows Hello Support	Yes, optional fingerprint on power button Optional IR camera
Cable lock	Noble lock
Dell Smartcard Keyboard	Optional
FIPS 140-2 certification for TPM	Yes
ControlVault 3 Advanced Authentication with FIPS 140-2 Level 3 Certification	Yes, for FPR, SC and CSC/NFC
Fingerprint Reader Only	Touch Fingerprint reader in power button tied to ControlVault 3
Contacted Smart Card and ControlVault 3	FIPS 201 Smart card reader certification/SIPR

Identifier	GUID-EB9C7F89-DA37-470A-B1DB-08B38E895B09
Status	Released

Security options—Contacted smartcard reader

Table 25. Contacted smartcard reader

Title	Description	Dell ControlVault 3 Smartcard reader
ISO 7816 -3 Class A Card Support	Reader capable of reading 5V powered smartcard	Yes
ISO 7816 -3 Class B Card Support	Reader capable of reading 3V powered smartcard	Yes
ISO 7816 -3 Class C Card support	Reader capable of reading 1.8V powered smartcard	Yes
ISO 7816-1 Compliant	Specification for the reader	Yes
ISO 7816 -2 Compliant	Specification for smartcard device physical characteristics (size, location of connection points, etc.)	Yes
T=0 support	Cards support character level transmission	Yes
T=1 support	Cards support block level transmission	Yes
EMVCo Compliant	Compliant with EMVCo (for electronic payment standards) smartcard standards as posted to www.emvco.com	Yes
EMVCo Certified	Formally certified based on EMVCO smartcard standards	Yes

Title	Description	Dell ControlVault 3 Smartcard reader
PC/SC OS interface	Personal Computer/Smart Card specification for integration of hardware readers into personal computer environments	Yes
CCID driver compliance	Common driver support for Integrated Circuit Card Interface Device for OS level drivers.	Yes
Windows Certified	Device certified by Microsoft WHCK	Yes
FIPS 201 (PIV/HSPD-12) Compliant via GSA	Device compliant with FIPS 201/PIV/HSPD-12 requirements	Yes

Identifier	GUID-93CE3FA2-6EF2-42E2-B2F8-A9615136E2A7
Status	Released

Security options—Contactless smartcard reader

Table 26. Contactless smartcard reader

Title	Description	Dell ControlVault 3 Contactless Smartcard reader with NFC
Felica Card Support	Reader and software capable of supporting Felica contactless cards	Yes
ISO 14443 Type A Card Support	Reader and software capable of supporting ISO 14443 Type A contactless cards	Yes
ISO 14443 Type B Card Support	Reader and software capable of supporting ISO 14443 Type B contactless cards	Yes
ISO/IEC 21481	Reader and software capable of supporting ISO/IEC 21481 compliant contactless cards and tokens	Yes
ISO/IEC 18092	Reader and software capable of supporting ISO/IEC 21481 compliant contactless cards and tokens	Yes
ISO 15693 Card Support	Reader and software capable of supporting ISO15693 contactless cards	Yes
NFC Tag Support	Supports reading and processing of NFC compliant tag information	Yes
NFC Reader Mode	Support for NFC Forum Defined Reader mode	Yes
NFC Writer Mode	Support for NFC Forum Defined Writer mode	Yes
NFC Peer-to-Peer Mode	Support for NFC Forum Defined Peer to Peer mode	Yes
EMVCo Compliant	Compliant with EMVCO smartcard standards as posted to www.emvco.com	Yes
EMVCo Certified	Formally certified based on EMVCO smartcard standards	Yes
NFC Proximity OS Interface	Enumerates NFP (Near Field Proximity) device for OS to utilize	Yes

Title	Description	Dell ControlVault 3 Contactless Smartcard reader with NFC
PC/SC OS interface	Personal Computer/Smart Card specification for integration of hardware readers into personal computer environments	Yes
CCID driver compliance	Common driver support for Integrated Circuit Card Interface Device for OS level drivers	Yes
Windows Certified	Device certified by Microsoft WHCK	Yes
Dell ControlVault support	Device connects to Dell ControlVault for usage and processing	Yes
Prox (Proximity) (125kHz) Card support	Reader and software capable of supporting Prox/Proximity/125kHz contactless cards	No

NOTE: 125 Khz proximity cards are not supported.

Table 27. Supported cards

Manufacturer	Card	Supported
HID	jCOP readertest3 A card (14443a)	Yes
	1430 1L	
	DESFire D8H	
	iClass (Legacy)	
	iClass SEOS	
NXP/Mifare	Mifare DESFire 8K White PVC Cards	Yes
	Mifare Classic 1K White PVC Cards	
	NXP Mifare Classic S50 ISO Card	
G&D	idOnDemand - SCE3.2 144K	Yes
	SCE6.0 FIPS 80K Dual+ 1 K Mifare	
	SCE6.0 nonFIPS 80K Dual+ 1 K Mifare	
	SCE6.0 FIPS 144K Dual + 1K Mifare	
	SCE6.0 nonFIPS 144K Dual + 1 K Mifare	
	SCE7.0 FIPS 144K	
Oberthur	idOnDemand - OCS5.2 80K	Yes
	ID-One Cosmo 64 RSA D V5.4 T=0 card	

Identifier	GUID-F7860150-1123-4832-A6E8-C79F9E0D2E54
Status	Released

Security Software

Table 28. Security Software specifications

Specifications

Dell Client Command Suite

Specifications

Optional Dell Data Security and Management Software

- Dell Endpoint Security Suite Enterprise
 - Dell Data Guardian
 - Dell Encryption Enterprise
 - Dell Encryption Personal
 - Dell Threat Defense
 - MozyPro or MozyEnterprise
 - RSA NetWitness Endpoint
 - RSA SecurID Access
 - VMware Workspace ONE
 - Absolute Endpoint Visibility and Control
-

Identifier	GUID-A6E53F63-BEBC-4082-847B-8E406F46F4D1
Status	Released

Keyboard shortcuts

NOTE: Keyboard characters may differ depending on the keyboard language configuration. Keys used for shortcuts remain the same across all language configurations.























Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. The symbol shown on the lower part of the key refers to the character that is typed out when the key is pressed. If you press shift and the key, the symbol shown on the upper part of the key is typed out. For example, if you press **2**, 2 is typed out; if you press **Shift + 2**, @ is typed out.

The keys F1-F12 at the top row of the keyboard are function keys for multi-media control, as indicated by the icon at the bottom of the key. Press the function key to invoke the task represented by the icon. For example, pressing F1 mutes the audio (refer to the table below).

However, if the function keys F1-F12 are needed for specific software applications, multi-media functionality can be disabled by pressing **Fn + Esc**. Subsequently, multi-media control can be invoked by pressing **Fn** and the respective function key. For example, mute audio by pressing **Fn + F1**.













NOTE: You can also define the primary behavior of the function keys (F1–F12) by changing Function Key Behavior in BIOS setup program.

Table 29. List of keyboard shortcuts

Function key	Redefined key (for multimedia control)	Behavior
		Mute audio
		Decrease volume
		Increase volume
		Play previous track/chapter
		Play/Pause
		Play next track/chapter
		Switch to external display
		Search
		Toggle keyboard backlight (optional) NOTE: Non-backlight keyboards have F10 function key without the backlight icon and does not support toggle keyboard backlight function.
		Decrease brightness
		Increase brightness

The **Fn** key is also used with selected keys on the keyboard to invoke other secondary functions.

Table 30. List of keyboard shortcuts

Function key	Behavior
	Turn off/on wireless
	Pause/Break
	Sleep
	Toggle scroll lock
	Toggle between power and battery-status light/hard-drive activity light
	System request
	Open application menu
	Toggle Fn-key lock
	Page up
	Page down
	Home
	End

Identifier	GUID-612013A6-47D4-4AC5-BEC8-BBBF8EF93D1F
Status	Released

Software

This chapter details the supported operating systems along with instructions on how to install the drivers.

Topics:

- [Downloading drivers](#)

Identifier	GUID-6E8E3CB8-E173-461A-975F-90DF0C9EE742
Status	Released

Downloading drivers

1. Turn on the tablet.
2. Go to **Dell.com/support**.
3. Click **Product Support**, enter the Service Tag of your tablet, and then click **Submit**.

 **NOTE: If you do not have the Service Tag, use the auto detect feature or manually browse for your tablet model.**

4. Click **Drivers and Downloads**.
5. Select the operating system installed on your tablet.
6. Scroll down the page and select the driver to install.
7. Click **Download File** to download the driver for your tablet.
8. After the download is complete, navigate to the folder where you saved the driver file.
9. Double-click the driver file icon and follow the instructions on the screen.

Identifier	GUID-E8E05C46-BC9D-4CF1-AC84-34B87FDCCFB7
Status	Released

System setup

CAUTION: Unless you are an expert computer user, do not change the settings in the BIOS Setup program. Certain changes can make your computer work incorrectly.

NOTE: Before you change BIOS Setup program, it is recommended that you write down the BIOS Setup program screen information for future reference.

Use the BIOS Setup program for the following purposes:

- Get information about the hardware installed in your computer, such as the amount of RAM and the size of the hard drive.
- Change the system configuration information.
- Set or change a user-selectable option, such as the user password, type of hard drive installed, and enabling or disabling base devices.

Topics:

- [Boot menu](#)
- [Navigation keys](#)
- [Boot Sequence](#)
- [System setup options](#)
- [Updating the BIOS in Windows](#)
- [System and setup password](#)

Identifier	GUID-8FC0315F-0CBF-461A-996F-54A98F99D05A
Status	Released

Boot menu

Press <F12> when the Dell logo appears to initiate a one-time boot menu with a list of the valid boot devices for the system. Diagnostics and BIOS Setup options are also included in this menu. The devices listed on the boot menu depend on the bootable devices in the system. This menu is useful when you are attempting to boot to a particular device or to bring up the diagnostics for the system. Using the boot menu does not make any changes to the boot order stored in the BIOS.

The options are:

- UEFI Boot:
 - Windows Boot Manager
- Other Options:
 - BIOS Setup
 - BIOS Flash Update
 - Diagnostics
 - Change Boot Mode Settings

Identifier	GUID-7A7EB30A-4A48-422B-AE30-B8DC236A1790
Status	Released

Navigation keys

NOTE: For most of the System Setup options, changes that you make are recorded but do not take effect until you restart the system.

Keys

Navigation

Up arrow

Moves to the previous field.

Down arrow

Moves to the next field.

Enter

Selects a value in the selected field (if applicable) or follow the link in the field.

Spacebar

Expands or collapses a drop-down list, if applicable.

Tab

Moves to the next focus area.

Esc

Moves to the previous page until you view the main screen. Pressing Esc in the main screen displays a message that prompts you to save any unsaved changes and restarts the system.

Identifier	GUID-39EA0288-9174-49B6-ABA2-37C542A11FC5
Status	Released

Boot Sequence

Boot Sequence allows you to bypass the System Setup–defined boot device order and boot directly to a specific device (for example: optical drive or hard drive). During the Power-on Self Test (POST), when the Dell logo appears, you can:

- Access System Setup by pressing F2 key
- Bring up the one-time boot menu by pressing F12 key

The one-time boot menu displays the devices that you can boot from including the diagnostic option. The boot menu options are:

- Removable Drive (if available)
- STXXXX Drive

NOTE: XXX denotes the SATA drive number.

- Optical Drive (if available)
- SATA Hard Drive (if available)
- Diagnostics

NOTE: Choosing Diagnostics, will display the ePSA diagnostics screen.

The boot sequence screen also displays the option to access the System Setup screen.

Identifier	GUID-C0B6998F-EFAC-4D0B-93C6-EC55A64E0F81
Status	Released

System setup options

NOTE: Depending on the tablet and its installed devices, the items listed in this section may or may not appear.

Identifier	GUID-8239B7B5-4DDF-4B0D-8826-C7AD4B422DBA
Status	Released

General options

Table 31. General

Option	Description
System Information	<p>Displays the following information:</p> <ul style="list-style-type: none"> System Information: Displays BIOS Version, Service Tag, Asset Tag, Ownership Tag, Manufacture Date, Ownership Date, and the Express Service Code. Memory Information: Displays Memory Installed, Memory Available, Memory Speed, Memory Channel Mode, Memory Technology, DIMM A size, and DIMM B size Processor Information: Displays Processor Type, Core Count, Processor ID, Current Clock Speed, Minimum Clock Speed, Maximum Clock Speed, Processor L2 Cache, Processor L3 Cache, HT Capable, and 64-Bit Technology. Device Information: Displays Primary HDD, M.2 PCIe SSD-0, LOM MAC Address, Video Controller, Video BIOS Version, Video Memory, Panel type, Native Resolution, Audio Controller, Wi-Fi Device, and Bluetooth Device.
Battery Information	Displays the battery status health and whether the AC adapter is installed.
Boot Sequence	Allows you to specify the order in which the computer attempts to find an operating system from the devices specified in this list.
UEFI Boot Path Security	<p>This option controls whether or not the system will prompt the user to enter the Admin password when booting a UEFI boot path from the F12 Boot Menu.</p> <ul style="list-style-type: none"> Always, Except Internal HDD—Default Always, Except Internal HDD&PXE Always Never
Date/Time	Allows you to set the date and time settings. Changes to the system date and time take effect immediately.

Identifier	GUID-4DEF12E6-876A-4ABB-B754-EA6083F1EE39
Status	Released

System information

Table 32. System Configuration

Option	Description
Integrated NIC	<p>Allows you to configure the on-board LAN controller.</p> <ul style="list-style-type: none"> Disabled = The internal LAN is off and not visible to the operating system. Enabled = The internal LAN is enabled. Enabled w/PXE = The internal LAN is enabled (with PXE boot) (selected by default)
SATA Operation	<p>Allows you to configure the operating mode of the integrated hard drive controller.</p> <ul style="list-style-type: none"> Disabled = The SATA controllers are hidden AHCI = SATA is configured for AHCI mode RAID ON = SATA is configured to support RAID mode (selected by default)
Drives	<p>Allows you to enable or disable the various drives on-board:</p> <ul style="list-style-type: none"> SATA-2 (enabled by default) M.2 PCIe SSD-0 (enabled by default)
Smart Reporting	<p>This field controls whether hard drive errors for integrated drives are reported during system startup. The Enable Smart Reporting option is disabled by default.</p>

Option	Description
USB Configuration	<p>Allows you to enable or disable the integrated USB controller for:</p> <ul style="list-style-type: none"> • Enable USB Boot Support • Enable External USB Port <p>All the options are enabled by default.</p>
Thunderbolt Adapter Configuration	<p>This section allows Thunderbolt Adapter Configuration.</p> <ul style="list-style-type: none"> • Thunderbolt-is enabled by default • Enable Thunderbolt Boot Support-is disabled • No security-is disabled • User configuration-enabled by default • Secure connect-is disabled • Display port and USB Only-is disabled
USB PowerShare	<p>This option configures the USB PowerShare feature behavior.</p> <ul style="list-style-type: none"> • Enable USB PowerShare - disabled by default <p>This feature is intended to allow users to power or charge external devices, such as phones and portable music players, using the stored system battery power through the USB PowerShare port on the notebook, while the notebook is in a sleep state.</p>
Audio	<p>Allows you to enable or disable the integrated audio controller. The option Enable Audio is selected by default.</p> <ul style="list-style-type: none"> • Enable Microphone • Enable Internal Speaker <p>Both the options are selected by default.</p>
Keyboard Illumination	<p>This field lets you choose the operating mode of the keyboard illumination feature. The keyboard brightness level can be set from 0% to 100%. The options are:</p> <ul style="list-style-type: none"> • Disabled • Dim • Bright-enabled by default
Keyboard Backlight Timeout on AC	<p>The Keyboard Backlight Timeout dims out with AC option. The main keyboard illumination feature is not affected. Keyboard Illumination will continue to support the various illumination levels. This field has an effect when the backlight is enabled. The options are:</p> <ul style="list-style-type: none"> • 5 sec • 10 sec-enabled by default • 15 sec • 30 sec • 1 min • 5 min • 15 min • Never
Keyboard Backlight Timeout on Battery	<p>The Keyboard Backlight Timeout dims out with the Battery option. The main keyboard illumination feature is not affected. Keyboard Illumination will continue to support the various illumination levels. This field has an effect when the backlight is enabled. The options are:</p> <ul style="list-style-type: none"> • 5 sec • 10 sec-enabled by default • 15 sec • 30 sec • 1 min • 5 min • 15 min • Never

Option	Description
Unobtrusive Mode	<ul style="list-style-type: none"> Enable Unobtrusive Mode (disabled by default) <p>When enabled pressing Fn+Shift+B will turn off all light and sound emissions in the system. Press Fn+Shift+B to resume normal operation.</p>
Miscellaneous Devices	<p>Allows you to enable or disable the following devices:</p> <ul style="list-style-type: none"> Enable Camera (enabled by default) Enable Hard Drive Free Fall Protection(enabled by default) Enable Secure Digital (SD) Card (enabled by default) Secure Digital (SD) Card Boot Secure Digital (SD) Card Read-Only Mode
MAC Address Pass-Through	<ul style="list-style-type: none"> System Unique MAC Address (disabled by default) Integrated NIC 1 MAC Address Disabled <p>The feature replaces the external NIC MAC address (in a supported dock or dongle) with the selected MAC address from the system. The default option is to use the Passthrough MAC address.</p>

Identifier	GUID-23ACB530-9D5D-4C14-A1AA-91245F72B3EB
Status	Released

Video

Option	Description
LCD Brightness	Allows you to set the display brightness depending up on the power source—On Battery and On AC. The LCD brightness is independent for battery and AC adapter. It can be set using the slider.

NOTE: The video setting is visible only when a video card is installed into the system.

Identifier	GUID-56AEA98C-A20E-4E08-A890-4E90CB1DC534
Status	Released

Security

Table 33. Security

Option	Description
Admin Password	Allows you to set, change, and delete the admin password.
System Password	Allows you to set, change, and delete the system password.
Internal HDD-2 Password	This option lets you set, change, or delete the password on the system's internal hard disk drive (HDD).
Strong Password	This option lets you enable or disable strong passwords for the system.
Password Configuration	Allows you to control the minimum and maximum number of characters allowed for a administrative password and the system password. The range of characters is between 4 and 32.
Password Bypass	<p>This option lets you bypass the System (Boot) Password and the internal HDD password prompts during a system restart.</p> <ul style="list-style-type: none"> Disabled — Always prompt for the system and internal HDD password when they are set. This option is enabled by default. Reboot Bypass — Bypass the password prompts on Restarts (warm boots). <p>NOTE: The system will always prompt for the system and internal HDD passwords when powered on from the off state (a cold boot). Also, the system will always prompt for passwords on any module bay HDDs that may be present.</p>

Option	Description
Password Change	This option lets you determine whether changes to the System and Hard Disk passwords are permitted when an administrator password is set. Allow Non-Admin Password Changes - This option is enabled by default.
UEFI Capsule Firmware Updates	This option controls whether this system allows BIOS updates via UEFI capsule update packages. This option is selected by default. Disabling this option will block BIOS updates from services such as Microsoft Windows Update and Linux Vendor Firmware Service (LVFS)
TPM 2.0 Security	Allows you to control whether the Trusted Platform Module (TPM) is visible to the operating system. <ul style="list-style-type: none"> TPM On (default) Clear PPI Bypass for Enable Commands PPI Bypass for Disable Commands PPI Bypass for Clear Commands Attestation Enable (default) Key Storage Enable (default) SHA-256 (default) Choose any one option: <ul style="list-style-type: none"> Disabled Enabled (default)
Absolute	This field lets you Enable, Disable or Permanently Disable the BIOS module interface of the optional Absolute Persistence Module service from Absolute Software. <ul style="list-style-type: none"> Enabled - This option is selected by default. Disabled Permanently Disabled
OROM Keyboard Access	This option determines whether users are able to enter Option ROM configuration screen via hotkeys during boot. <ul style="list-style-type: none"> Enabled (default) Disabled One Time Enable
Admin Setup Lockout	Allows you to prevent users from entering Setup when Admin password is set. This option is not set by default.
Master Password Lockout	Allows you to disable master password support Hard Disk passwords need to be cleared before the settings can be changed. This option is not set by default.
SMM Security Mitigation	Allows you to enable or disable additional UEFI SMM Security Mitigation protections. This option is not set by default.

Identifier	GUID-8A811805-1BB4-4D27-A2E8-EF6A333BE1A9
Status	Released

Secure boot

Table 34. Secure Boot

Option	Description
Secure Boot Enable	Allows you to enable or disable Secure Boot feature <ul style="list-style-type: none"> Secure Boot Enable Option is not selected.

Option	Description
Secure Boot Mode	<p>Allows you to modify the behavior of Secure Boot to allow evaluation or enforcement of UEFI driver signatures.</p> <ul style="list-style-type: none"> · Deployed Mode (default) · Audit Mode
Expert key Management	<p>Allows you to manipulate the security key databases only if the system is in Custom Mode. The Enable Custom Mode option is disabled by default. The options are:</p> <ul style="list-style-type: none"> · PK (default) · KEK · db · dbx <p>If you enable the Custom Mode, the relevant options for PK, KEK, db, and dbx appear. The options are:</p> <ul style="list-style-type: none"> · Save to File- Saves the key to a user-selected file · Replace from File- Replaces the current key with a key from a user-selected file · Append from File- Adds a key to the current database from a user-selected file · Delete- Deletes the selected key · Reset All Keys- Resets to default setting · Delete All Keys- Deletes all the keys <p>NOTE: If you disable the Custom Mode, all the changes made will be erased and the keys will restore to default settings.</p>

Identifier	GUID-BC55A786-5F9E-45BF-8423-2E396363DAE0
Status	Released

Intel Software Guard Extensions

Table 35. Intel Software Guard Extensions

Option	Description
Intel SGX Enable	<p>This field specifies you to provide a secured environment for running code/storing sensitive information in the context of the main OS.</p> <p>Click one of the following options:</p> <ul style="list-style-type: none"> · Disabled · Enabled · Software controlled—Default
Enclave Memory Size	<p>This option sets SGX Enclave Reserve Memory Size</p> <p>Click one of the following options:</p> <ul style="list-style-type: none"> · 32 MB · 64 MB · 128 MB—Default

Identifier	GUID-C817865F-8300-498C-99E3-345278329579
Status	Released

Performance

Table 36. Performance

Option	Description
Multi Core Support	<p>This field specifies whether the process has one or all cores enabled. The performance of some applications improves with the additional cores.</p> <ul style="list-style-type: none"> • All—Default • 1 • 2 • 3
Intel SpeedStep	<p>Allows you to enable or disable the Intel SpeedStep mode of processor.</p> <ul style="list-style-type: none"> • Enable Intel SpeedStep <p>This option is set by default.</p>
C-States Control	<p>Allows you to enable or disable the additional processor sleep states.</p> <ul style="list-style-type: none"> • C states <p>This option is set by default.</p>
Intel TurboBoost	<p>Allows you to enable or disable the Intel TurboBoost mode of the processor.</p> <ul style="list-style-type: none"> • Enable Intel TurboBoost <p>This option is set by default.</p>
Hyper-Thread Control	<p>Allows you to enable or disable the HyperThreading in the processor.</p> <ul style="list-style-type: none"> • Disabled • Enabled—Default

Identifier	GUID-730F6D1D-4F10-4822-98E7-DB64654A5E76
Status	Released

Power management

Option	Description
AC Behavior	<p>Allows you to enable or disable the computer from turning on automatically when an AC adapter is connected.</p> <p>Default setting: Wake on AC is not selected.</p>
Enable Intel Speed Shift Technology	<ul style="list-style-type: none"> • Enable Intel Speed Shift Technology <p>Default setting: Enabled</p>
Auto On Time	<p>Allows you to set the time at which the computer must turn on automatically. The options are:</p> <ul style="list-style-type: none"> • Disabled • Every Day • Weekdays • Select Days <p>Default setting: Disabled</p>

Option	Description
USB Wake Support	<p>Allows you to enable USB devices to wake the system from Standby.</p> <p>NOTE: This feature is only functional when the AC power adapter is connected. If the AC power adapter is removed during Standby, the system setup removes power from all the USB ports to conserve battery power.</p> <ul style="list-style-type: none"> Enable USB Wake Support
Wireless Radio Control	<p>If Enabled, this feature will sense the connection of the system to a wired network and subsequently disable the selected wireless radios (WLAN and/ or WWAN).</p> <ul style="list-style-type: none"> Control WLAN radio - is disabled
Wake on LAN	<p>Allows you to enable or disable the feature that powers on the computer from the Off state when triggered by a LAN signal.</p> <ul style="list-style-type: none"> Disabled LAN Only LAN with PXE Boot <p>Default setting: Disabled</p>
Block Sleep	<p>This option lets you to block entering to sleep in OS environment. When enabled system won't go to sleep.</p> <p>Block Sleep - is disabled</p>
Peak Shift	<p>This option enables you to minimize the AC power consumption during the peak power times of day. After you enable this option, your system runs only in battery even if the AC is attached.</p> <ul style="list-style-type: none"> Enable peak shift—is disabled Set battery threshold (15% to 100%) - 15 % (enabled by default)
Advanced Battery Charge Configuration	<p>This option enables you to maximize the battery health. By enabling this option, your system uses the standard charging algorithm and other techniques, during the non work hours to improve the battery health.</p> <p>Enable Advanced Battery Charge Mode- is disabled</p>
Primary Battery Charge Configuration	<p>Allows you to select the charging mode for the battery. The options are:</p> <ul style="list-style-type: none"> Adaptive—enabled by default Standard—Fully charges your battery at a standard rate. ExpressCharge—The battery charges over a shorter time using Dell's fast charging technology. Primarily AC use Custom <p>If Custom Charge is selected, you can also configure Custom Charge Start and Custom Charge Stop.</p> <p>NOTE: All charging mode may not be available for all the batteries. To enable this option, disable the Advanced Battery Charge Configuration option.</p>

Identifier	GUID-D37FF18C-3501-42A9-86ED-BC2C55D43007
Status	Released

POST behavior

Option	Description
Adapter Warnings	<p>Allows you to enable or disable the system setup (BIOS) warning messages when you use certain power adapters.</p> <p>Default setting: Enable Adapter Warnings</p>
Numlock Enable	<p>Allows you to enable the Numlock option when the computer boots.</p> <p>Enable Network. This option is enabled by default.</p>
Fn Lock Options	<p>Allows you to let hot key combinations Fn + Esc toggle the primary behavior of F1–F12, between their standard and secondary functions. If you disable this option, you cannot toggle dynamically the primary behavior of these keys. The available options are:</p>

Option	Description
	<ul style="list-style-type: none"> Fn Lock—enabled by default Lock Mode Disable/Standard—enabled by default Lock Mode Enable/Secondary
Fastboot	Allows you to speed up the boot process by bypassing some of the compatibility steps. The options are: <ul style="list-style-type: none"> Minimal Thorough—enabled by default Auto
Extended BIOS POST Time	Allows you to create an extra preboot delay. The options are: <ul style="list-style-type: none"> 0 seconds—enabled by default. 5 seconds 10 seconds
Full Screen Log	<ul style="list-style-type: none"> Enable Full Screen Logo—not enabled
Warnings and errors	<ul style="list-style-type: none"> Prompt on warnings and errors—enabled by default Continue on warnings Continue on warnings and errors

Identifier	GUID-7D5BD7AF-9445-4121-9FA6-EA1D5A0A5C5F
Status	Released

Manageability

Option	Description
Intel AMT Capability	Allows you to provision AMT and MEBx Hotkey function is enabled, during the system boot. <ul style="list-style-type: none"> Disabled Enabled - by default Restrict MEBx Access
MEBx Hotkey	When enabled Intel AMT can be provisioned using the local provisioning file via a USB storage device. <ul style="list-style-type: none"> Enable USB Provision - disabled by default
MEBx Hotkey	Allows you to specify whether the MEBx Hotkey function should enable, during the system boot. <ul style="list-style-type: none"> Enable MEBx hotkey—enabled by default

Identifier	GUID-089C65EF-7AC9-4206-991A-241EFA1E51B1
Status	Released

Virtualization support

Option	Description
Virtualization	This field specifies whether a virtual Machine Monitor (VMM) can utilize the conditional hardware capabilities provided by Intel Virtualization Technology. <p>Enable Intel Virtualization Technology—enabled by default.</p>
VT for Direct I/O	Enables or disables the Virtual Machine Monitor (VMM) from utilizing the additional hardware capabilities provided by Intel® Virtualization technology for direct I/O. <p>Enable VT for Direct I/O - enabled by default.</p>
Trusted Execution	This option specifies whether a Measured Virtual Machine Monitor (MVMM) can utilize the additional hardware capabilities provided by Intel Trusted Execution Technology. The TPM Virtualization Technology, and the Virtualization technology for direct I/O must be enabled to use this feature.

Option	Description
	Trusted Execution - disabled by default.

Identifier	GUID-D648CD97-102A-4033-9E06-6ACA2D7F177C
Status	Released

Wireless

Option Description

Wireless Device Enable	<p>Allows you to enable or disable the internal wireless devices.</p> <ul style="list-style-type: none"> · WLAN · Bluetooth <p>All the options are enabled by default.</p>
-------------------------------	--

Identifier	GUID-17ED2FB6-8D85-40BB-8F73-6D53BE04E18C
Status	Released

Maintenance screen

Option Description

Service Tag	Displays the Service Tag of your computer.
Asset Tag	Allows you to create a system asset tag if an asset tag is not already set. This option is not set by default.
BIOS Downgrade	This controls flashing of the system firmware to previous revisions. Option 'Allow BIOS downgrade' is enabled by default.
Data Wipe	<p>This field allows users to erase the data securely from all internal storage devices. Option 'Wipe on Next boot' is not enabled by default. The following is list of devices affected:</p> <ul style="list-style-type: none"> · Internal SATA HDD/SSD · Internal M.2 SATA SDD · Internal M.2 PCIe SSD · Internal eMMC
BIOS Recovery	<p>This field allows you to recover from certain corrupted BIOS conditions from a recover file on the user primary hard drive or an external USB key.</p> <ul style="list-style-type: none"> · BIOS Recovery from Hard Drive—enabled by default · Always perform integrity check—disabled by default
First Power On Date	<p>This option lets you set Ownership date.</p> <ul style="list-style-type: none"> · Set Ownership Date—disabled by default

Identifier	GUID-F92235B9-147C-4E19-AA0A-367BB59E7065
Status	Released

System logs

Option Description

BIOS Events	Allows you to view and clear the System Setup (BIOS) POST events.
Thermal Events	Allows you to view and clear the System Setup (Thermal) events.
Power Events	Allows you to view and clear the System Setup (Power) events.

Identifier	GUID-39A4D20E-3382-4BBB-8017-A2044689C2C8
Status	Released

Updating the BIOS in Windows

It is recommended to update your BIOS (System Setup), when you replace the system board or if an update is available.

NOTE: If BitLocker is enabled, it must be suspended prior to updating the system BIOS, and then re-enabled after the BIOS update is completed.

1. Restart the computer.
2. Go to **Dell.com/support**.
 - Enter the **Service Tag** or **Express Service Code** and click **Submit**.
 - Click **Detect Product** and follow the instructions on screen.
3. If you are unable to detect or find the Service Tag, click **Choose from all products**.
4. Choose the **Products** category from the list.

NOTE: Choose the appropriate category to reach the product page

5. Select your computer model and the **Product Support** page of your computer appears.
6. Click **Get drivers** and click **Drivers and Downloads**.
The Drivers and Downloads section opens.
7. Click **Find it myself**.
8. Click **BIOS** to view the BIOS versions.
9. Identify the latest BIOS file and click **Download**.
10. Select your preferred download method in the **Please select your download method below** window, click **Download File**.
The **File Download** window appears.
11. Click **Save** to save the file on your computer.
12. Click **Run** to install the updated BIOS settings on your computer.
Follow the instructions on the screen.

Identifier	GUID-B2316265-96B6-4EE5-A29E-8C01FC6E5710
Status	Released

Updating BIOS on systems with BitLocker enabled

CAUTION: If BitLocker is not suspended before updating the BIOS, the next time you reboot the system it will not recognize the BitLocker key. You will then be prompted to enter the recovery key to progress and the system will ask for this on each reboot. If the recovery key is not known this can result in data loss or an unnecessary operating system re-install. For more information on this subject, see Knowledge Article: <https://www.dell.com/support/article/sln153694>

Identifier	GUID-08844976-AE7C-4757-B3AD-E54CA0CCAA20
Status	Released

Updating your system BIOS using a USB flash drive

If the system cannot load into Windows but there is still a need to update the BIOS, download the BIOS file using another system and save it to a bootable USB Flash Drive.

NOTE: You will need to use a bootable USB Flash drive. Please refer to the following article for further details: <https://www.dell.com/support/article/us/en/19/sln143196/>

1. Download the BIOS update .EXE file to another system.
2. Copy the file e.g. O9010A12.EXE onto the bootable USB Flash drive.
3. Insert the USB Flash drive into the system that requires the BIOS update.
4. Restart the system and press F12 when the Dell Splash logo appears to display the One Time Boot Menu.
5. Using arrow keys, select **USB Storage Device** and click Return.
6. The system will boot to a Diag C:\> prompt.
7. Run the file by typing the full filename e.g. O9010A12.exe and press Return.
8. The BIOS Update Utility will load, follow the instructions on screen.

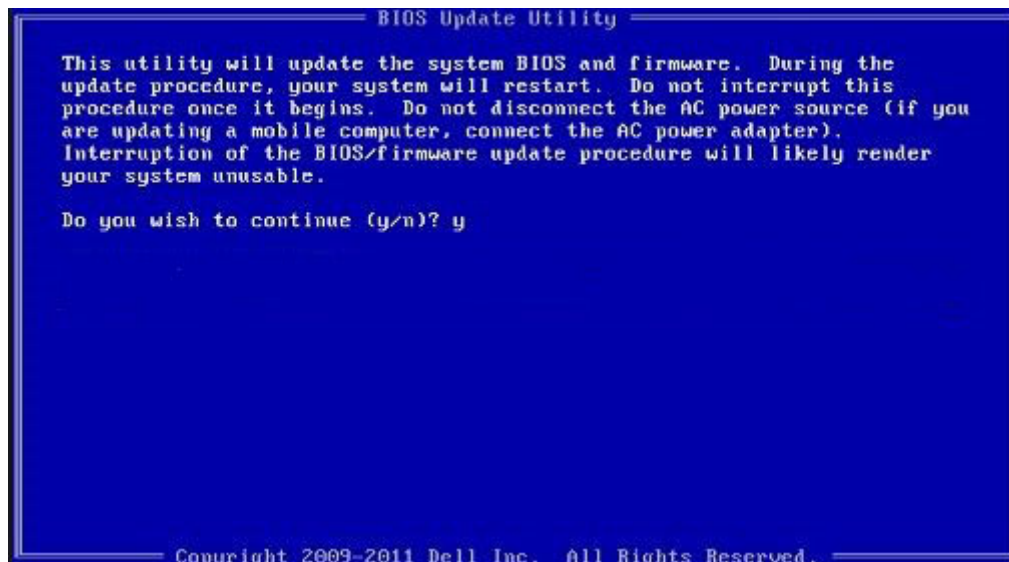


Figure 1. DOS BIOS Update Screen

Identifier GUID-859887F0-B1B4-4530-855E-100D4FDE930A
Status Released

System and setup password

Table 37. System and setup password

Password type	Description
System password	Password that you must enter to log on to your system.
Setup password	Password that you must enter to access and make changes to the BIOS settings of your computer.

You can create a system password and a setup password to secure your computer.

CAUTION: The password features provide a basic level of security for the data on your computer.

CAUTION: Anyone can access the data stored on your computer if it is not locked and left unattended.

NOTE: System and setup password feature is disabled.

Identifier GUID-D91DBF33-F0AB-477E-A22D-D6CD2D066BBE
Status Released

Assigning a system setup password

You can assign a new **System or Admin Password** only when the status is in **Not Set**.

To enter the system setup, press F2 immediately after a power-on or re-boot.

- In the **System BIOS** or **System Setup** screen, select **Security** and press Enter. The **Security** screen is displayed.
- Select **System/Admin Password** and create a password in the **Enter the new password** field. Use the following guidelines to assign the system password:
 - A password can have up to 32 characters.
 - The password can contain the numbers 0 through 9.
 - Only lower case letters are valid, upper case letters are not allowed.
 - Only the following special characters are allowed: space, ("), (+), (.), (-), (.), (/), (:), ([), (\), (]), (').
- Type the system password that you entered earlier in the **Confirm new password** field and click **OK**.
- Press Esc and a message prompts you to save the changes.

5. Press Y to save the changes.
The computer reboots.


Identifier	GUID-3D32F643-EE78-4538-9D89-34BDFB68E9F1
Status	Released

Deleting or changing an existing system setup password

Ensure that the **Password Status** is Unlocked (in the System Setup) before attempting to delete or change the existing System and/or Setup password. You cannot delete or change an existing System or Setup password, if the **Password Status** is Locked.

To enter the System Setup, press F2 immediately after a power-on or reboot.

1. In the **System BIOS** or **System Setup** screen, select **System Security** and press Enter.
The **System Security** screen is displayed.
2. In the **System Security** screen, verify that **Password Status** is **Unlocked**.
3. Select **System Password**, alter or delete the existing system password and press Enter or Tab.
4. Select **Setup Password**, alter or delete the existing setup password and press Enter or Tab.

 **NOTE: If you change the System and/or Setup password, re-enter the new password when prompted. If you delete the System and/or Setup password, confirm the deletion when prompted.**

5. Press Esc and a message prompts you to save the changes.
6. Press Y to save the changes and exit from System Setup.
The computer reboots.

Identifier	GUID-BE16C181-0959-44C3-B434-E44A0A602A4C
Status	Released


Getting help

Topics:

- [Contacting Dell](#)

Identifier	GUID-7A3627F9-0363-4515-A1D4-1B7878F4B8C4
Status	Released

Contacting Dell

 **NOTE:** If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

1. Go to **Dell.com/support**.
2. Select your support category.
3. Verify your country or region in the **Choose a Country/Region** drop-down list at the bottom of the page.
4. Select the appropriate service or support link based on your need.